website:http://biz.LGservice.com
e-mail:http://www.LGEservice.com/techsup.html

PLASMA TV
SERVICE MANUAL

CHASSIS : RF-043B

MODEL : RZ-42PX10/11

CAUTION
BEFORE SERVICING THE CHASSIS,
READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

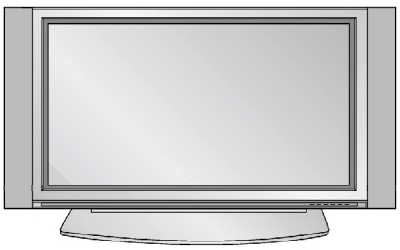

CONTENTS

SAFETY PRECAUTIONS 3

DESCRIPTION OF CONTROLS 4

SPECIFICATIONS 14

ADJUSTMENT INSTRUCTIONS 16

TROUBLE SHOOTING GUIDE 21

BLOCK DIAGRAM 32

EXPLODED VIEW 34

EXPLODED VIEW PARTS LIST 35

REPLACEMENT PARTS LIST 36

SCHEMATIC DIAGRAM .....

PRINTED CIRCUIT BOARD .....

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by ⚠ in the Schematic Diagram and Replacement Parts List.
It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards.
Do not modify the original design without permission of manufacturer.

General Guidance

An **isolation Transformer should always be used** during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and it's components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this monitor is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1W), keep the resistor 10mm away from PCB.

Keep wires away from high voltage or high temperature parts.

Due to high vacuum and large surface area of picture tube, extreme care should be used in **handling the Picture Tube**. Do not lift the Picture tube by it's Neck.

Leakage Current Cold Check(Antenna Cold Check)
With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.
If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1MΩ and 5.2MΩ.
When the exposed metal has no return path to the chassis the reading must be infinite.
An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)
Plug the AC cord directly into the AC outlet.
Do not use a line Isolation Transformer during this check.
Connect 1.5K/10watt resistor in parallel with a 0.15uF capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.
Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.
Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which is corresponds to 0.5mA.
In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

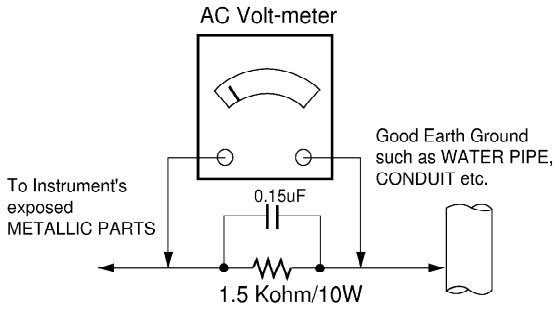

DESCRIPTION OF CONTROLS

- When using the remote control aim it at the remote control sensor of the set.
- There's maybe a defect in consecutive operation of remote control in specified brightness according to this set feature.

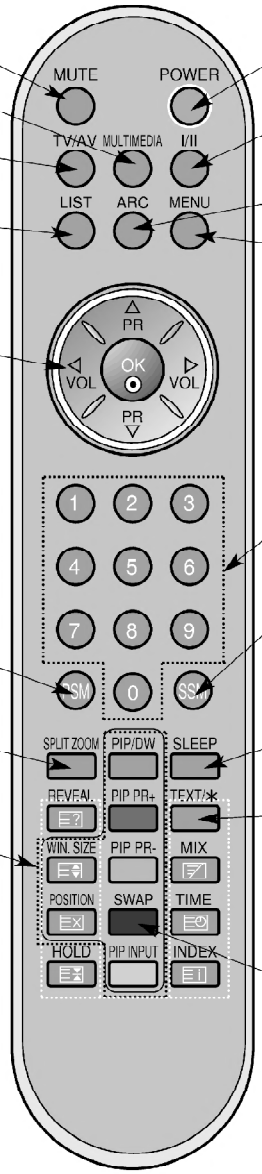

MUTE
Switches the sound on or off.

MULTIMEDIA
Selects the Component, RGB or DVI modes.

TV/AV
Selects the TV, AV, Component, RGB or DVI modes.

LIST
Displays the programme table.

▲ / ▼ (Programme Up/Down)
selects a programme or a menu item.
switches the set on from standby.
◄ / ► (Volume Up/Down)
adjusts the volume.
adjusts menu settings.
OK
accepts your selection or displays the current mode.

PSM
Adjusts the factory preset picture according to the room.

SPLIT ZOOM
Enlarge the screen with regular ration.

PIP/DW
Switches the sub picture on or off.
Selects PIP or DW modes.
PIP PR + /-
Selects a programme for the sub picture.
SWAP
Alternates between main and sub picture.
PIP INPUT
Selects the input mode for the sub picture.
WIN.SIZE
Adjusts the sub picture size.
POSITION
Moves the sub picture to ▲ / ▼ or ◄ / ► direction.

POWER
switches the set on from standby or off to standby.

I/II
Selects the language during dual language broadcast.
Selects the sound output.

ARC
Changes the picture format.

MENU
Displays on screen menus one by one.
Exits the current menu.
Memorizes menu changes.

NUMBER buttons

SSM
To select the sound appropriate to your viewing programme character.

SLEEP
Sets the sleep timer.

TEXT/✱
These buttons are used for teletext. For further details, see the 'Teletext' section.
Note : In teletext mode, the **PIP PR +/-**, **SWAP** and **PIP INPUT** buttons are used for teletext function.

SWAP
Returns to the previously viewed programme.
Note : This function works only when Favorite programme is set to Off. Otherwise each press of this button will select a stored favorite programme.

- Shown is a simplified representation of the set.
- Here shown may be somewhat different from your set.

<Front Panel Controls>

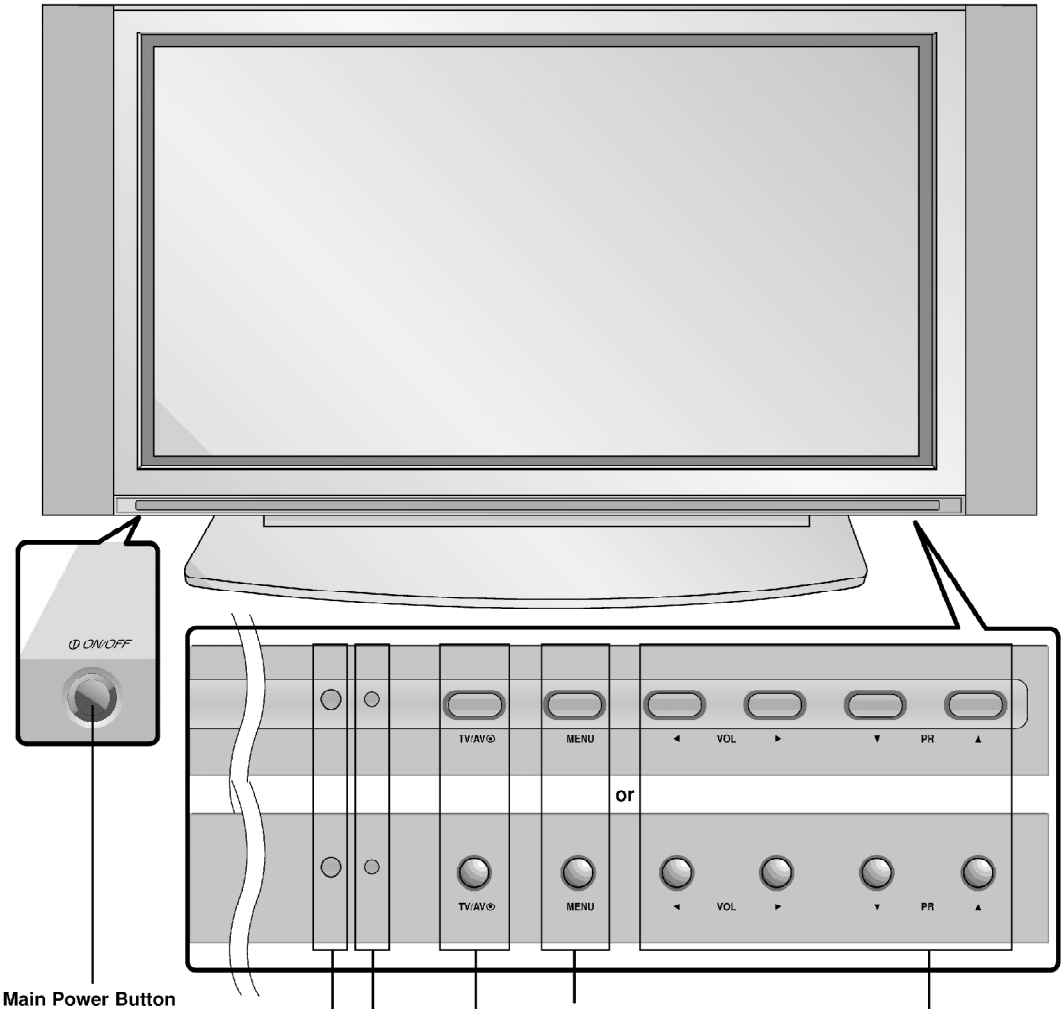

Main Power Button

Remote Control Sensor

MENU
Displays on screen menus one by one.
Exits the current menu.
Memorizes menu changes.

TV/AV Button
Selects the TV, AV, Component, RGB or DVI modes. If OSD is displayed, selects menu item.

Power Standby Indicator
Illuminates red in standby mode, Illuminates green when the set is turned on

▲ / ▼ (Programme Up/Down)
selects a programme or a menu item.
switches the set on from standby.
◄ / ► (Volume Up/Down)
adjusts the volume.
adjusts menu settings.

<Back Panel>

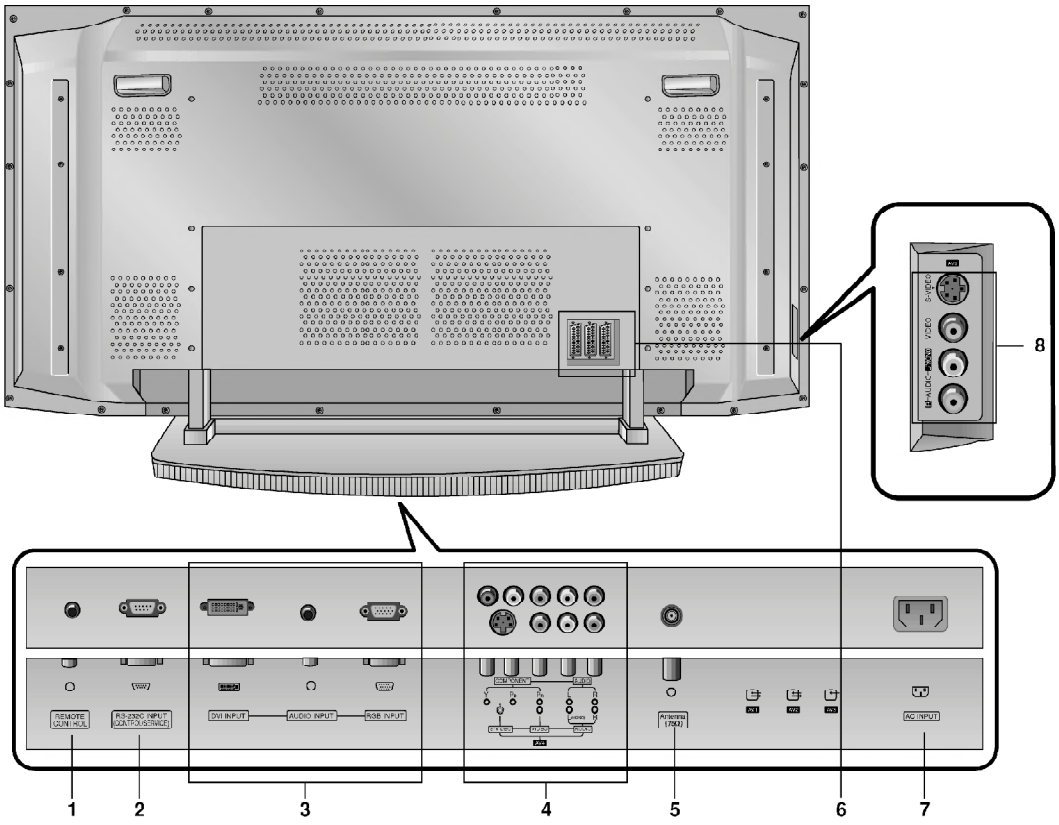

1. **REMOTE CONTROL**

2. **RS-232C INPUT(CONTROL/SERVICE) PORT**
   Connect to the RS-232C port on a PC.

3. **DVI INPUT / AUDIO INPUT / RGB INPUT**
   Connect the monitor output socket of the PERSONAL COMPUTER to this socket.
   Note: *If you want to use RGB/DVI audio, we strongly recommend that you use the cable that has a core, or the EMI Filter core along with separate cable.*

4. **COMPONENT INPUT**
   Connect DVD video outputs to Y, P_B, P_R of COMPONENT INPUT and audio outputs to Audio sockets of AUDIO INPUT.

   AUDIO/VIDEO IN SOCKETS (AV4)
   Connect the audio/video out sockets of external equipment to these sockets.
   S-VIDEO/AUDIO IN SOCKETS
   Connect the S-VIDEO out socket of an VCR to the **S-VIDEO** socket.
   Connect the audio out sockets of the VCR to the audio sockets as in **AV4**.

5. **ANTENNA INPUT**

6. **EURO SCART SOCKET**
   Connect the euro scart socket of the VCR to these sockets.

7. **POWER CORD SOCKET**
   This Monitor operates on an AC power. The voltage is indicated on the Specifications page. Never attempt to operate the Monitor on DC power.

8. **AUDIO/VIDEO IN SOCKETS (AV5)**
   S-VIDEO/AUDIO IN SOCKETS

Antenna Connection

- Be careful for the bronze wire not to be bended in connecting to antenna input port.

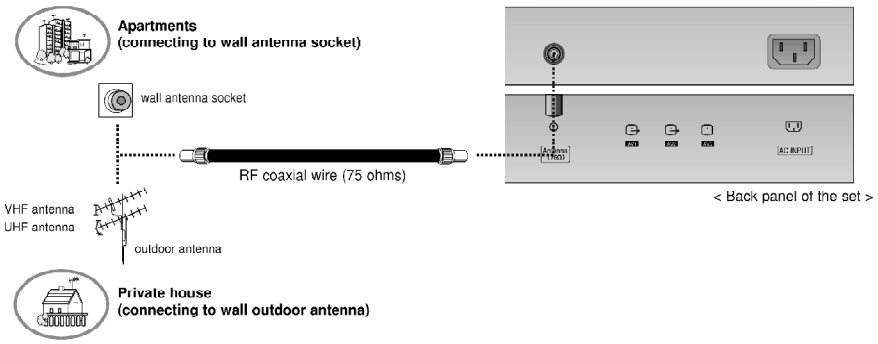

Watching VCR

- When connecting the set to external equipment, match the colours of connecting ports (Video - yellow, Audio (L) - white, Audio (R) -red).
- Connect the VIDEO INPUT socket (yellow) to the VIDEO INPUT on the set.
- If you have a mono VCR, connect the audio cable from the VCR to the AUDIO (L/MONO) input on the set.
- If you connect an S-VIDEO VCR to the S-VIDEO input, the picture quality is improved; compared to connecting a regular VCR to the Video input.
  Or, connect the Euro scart socket of the VCR to the Euro scart socket of the set.
- Use the orbiter function to Avoid having a fixed image remain on the screen for a long period of time. Typically a frozen still picture from a VCR. (Refer to p. 25)
  If a 4:3 picture format is used; the fixed image may remain visible on the screen.
- To avoid picture noise (interference), leave an adequate distance between the VCR and set.

Watching TV programmes

- Turn the set on and select the programme you want.

Watching VCR

1. Use the **TV/AV** button on the remote control to select AV1, AV2, AV3, AV4 or AV5.
   - If both S-VIDEO and VIDEO sockets have been connected to the S-VHS VCR simultaneously, only the S-VIDEO can be received.
2. Insert a video tape into the VCR and press the **PLAY** button on the VCR.
   (See VCR owner's manual)

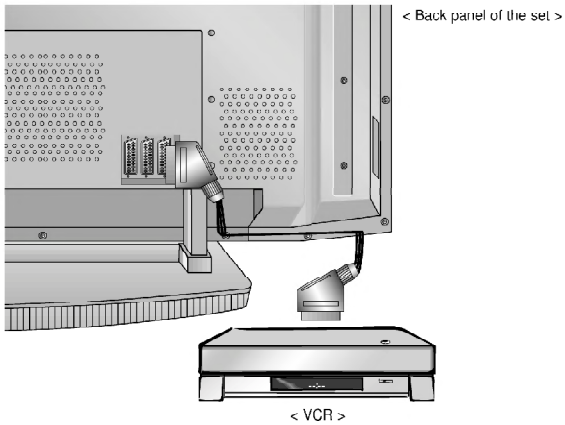

Watching Cable TV

- After subscribing for a local cable TV station and installing a converter you can watch cable TV.
- For further information of cable TV, contact the local cable TV station.

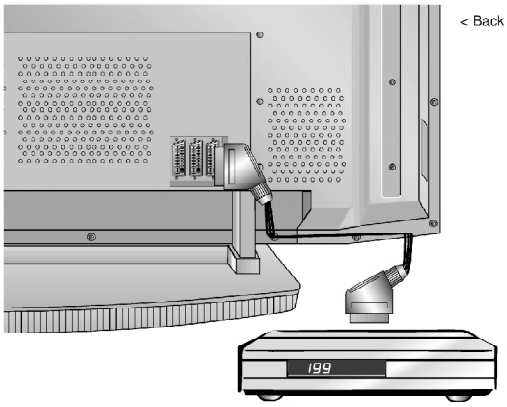

< Back panel of the set >

< Cable box >

To watch cable TV

1. Use the **TV/AV** button on the remote control to select AV1, AV2, AV3, AV4 or AV5.
2. Tune to cable service provided channels using the cable box.

Watching external AV source

- When connecting the set to an external source, match the colours of AUDIO/VIDEO input jacks on the set with the output jacks on the audio/video equipment: Video = yellow, Audio (Left) = white, Audio (Right) = red.
  Or, connect the Euro scart socket of the VCR to the Euro scart socket of the set.

How to use

1. Use the **TV/AV** button on the remote control to select AV1, AV2, AV3, AV4 or AV5.
2. Operate the corresponding external equipment. See external equipment operating guide.

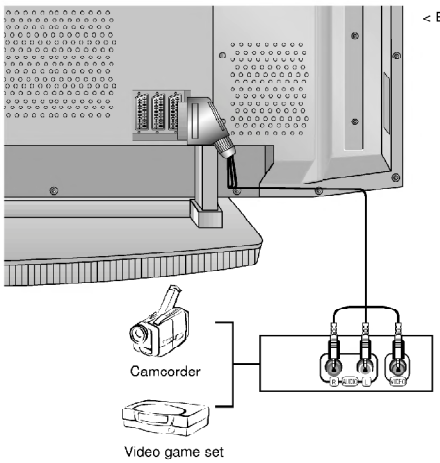

< Back panel of the set >

Watching DVD

How to connect

Connect DVD video outputs to Y, P_B, P_R of COMPONENT INPUT and audio outputs to Audio sockets of AUDIO INPUT.

How to use

1. Turn on the DVD player, and insert a DVD.
2. Use **TV/AV** or **MULTIMEDIA** button on the remote control to select Component. Refer to the DVD player's manual for operating instructions.

< Back panel of the set >

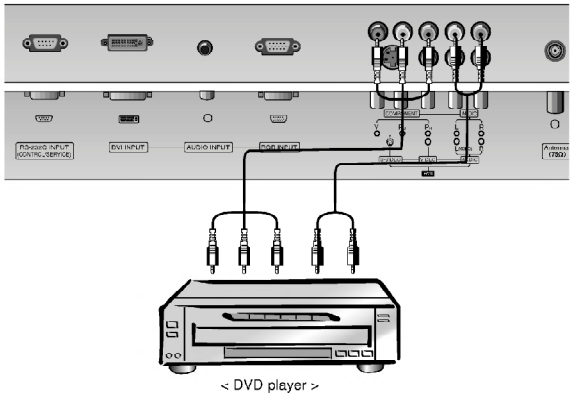

< DVD player >

- **Component Input ports**
  You can get better picture quality if you connect DVD player with component input ports as below.

Component ports of the set	Y	P_B	P_R
Video output ports of DVD player	Y	Pb	Pr
	Y	R-Y	R-Y
	Y	Cb	Cr
	Y	P_B	P_R

Connecting PC

- To enjoy vivid picture and sound, connect a PC to the set.
- Avoid keeping a fixed image on the set's screen for a long period of time. The fixed image may become permanently imprinted on the screen; use a screen saver when possible.
- Connect PC to the RGB INPUT(PC INPUT) or DVI INPUT(DIGITAL RGB INPUT) port of the set; change the resolution output of PC accordingly.
- There might be a noise according to some resolution, vertical pattern, contrast or brightness in PC mode. Then change the PC mode into other resolution or change the refresh rate into other rate or adjust the brightness and contrast on the menu until the picture is clean. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult it to the manufacturer of the PC graphic card.
- The synchronization input form for Horizontal and Vertical frequencies is separate.

Setup Instructions to Connect a PC to your set

- We recommend using 1024x768, 60Hz for the PC mode, they provide the best picture quality.
  In RZ-42PX10/11/20/21 series, we recommend using 640x480, 60Hz for the PC mode, they provide the best picture quality.
- If the resolution of PC is over UXGA, there will be no picture on the set.
- Connect the signal cable from the monitor output port of the PC to the RGB INPUT port of the set or the signal cable from the DVI output port of the PC to the DVI INPUT port on the set.
- Connect the audio cable from the PC to the Audio input on the set. (Audio cables are not included with the set).
- If using a sound card, adjust PC sound as required.
- This set apply a VESA Plug and Play Solution. The set provides EDID data to the PC system with a DDC protocol. The PC adjusts automatically to use this set.
- DDC protocol is preset for RGB (Analog RGB), DVI (Digital RGB) mode.
- If required, adjust the set settings for Plug and Play functionally.
- If graphic card on the PC does not output analog and digital RGB simultaneously, connect only one of both RGB INPUT or DVI INPUT to display the PC on the set.
  If graphic card on the PC does output analog and digital RGB simultaneously, set the set to either RGB or DVI; (the other mode is set to Plug and Play automatically by the set.)
- DOS mode may not work depending on video card if using a DVI-I cable.

< Back panel of the set >

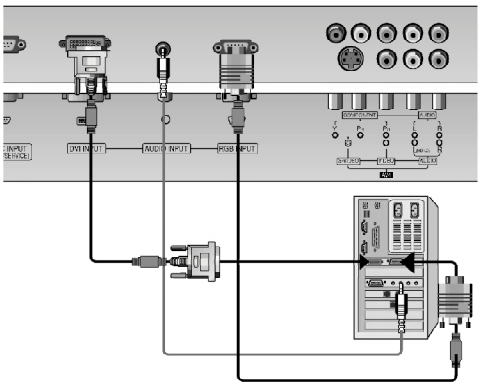

aPC Setup

1. Turn on the PC and apply power to the set.
2. Turn on the display by pressing the **POWER** button on the set's remote control.
3. Use the **TV/AV** or **MULTIMEDIA** button on the remote control to select the RGB or DVI input source.
4. Set the resolution output of the PC to SXGA or under (1280 x 1024, 60Hz). (Refer to p. 13)

Displayable Monitor Specification

RGB / DVI mode

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
640x350	31.468	70.09
	37.861	85.08
720x400	31.469	70.08
	37.927	85.03
640x480	31.469	59.94
	35.000	66.66
	37.861	72.80
	37.500	75.00
	43.269	85.00
848x480	31.500	60.00
	37.799	70.00
	39.375	75.00
852x480	31.500	60.00
	37.799	70.00
	39.375	75.00
800x600	35.156	56.25
	37.879	60.31
	48.077	72.18
	46.875	75.00
	53.674	85.06
832x624	49.725	74.55
1024x768	48.363	60.00
	56.476	70.06
	60.023	75.02
	68.677	85.00
1360x768 (XGA)	47.700	60.00
	59.625	75.02
1366x768 (XGA)	47.700	60.00
	59.625	75.02
1152x864 (RGB)	54.348	60.05
	63.995	70.01
	67.500	75.00
	77.487	85.00
1152x870 (RGB)	68.681	75.06
1280x768 (XGA)	47.693	60.00
	60.091	75.00
	68.504	85.00
1280x960 (RGB)	60.023	60.02
1280x1024 (RGB)	63.981	60.02

RZ-42PX10/11/12X/20/21 series

RGB / DVI mode

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
640x350	31.468	70.09
	37.861	85.08
720x400	31.469	70.08
	37.927	85.03
640x480	31.469	59.94
	35.000	66.66
	37.861	72.80
	37.500	75.00
	43.269	85.00
848x480	31.500	60.00
	37.799	70.00
	39.375	75.00
852x480	31.500	60.00
	37.799	70.00
	39.375	75.00
800x600	35.156	56.25 (RGB)
	37.879	60.31
	48.077	72.18
	46.875	75.00
	53.674	85.06
832x624	49.725	74.55
1024x768	48.363	60.00
	56.476	70.06
	60.023	75.02
	68.677	85.00
1360x768	47.700	60.00
	59.625	75.02
	68.500	85.00
1366x768	47.700	60.00
	59.625	75.02
	69.500	85.00
1152x864	54.348	60.05
	63.995	70.01
	67.500	75.00
	77.487	85.00
1152x870	68.681	75.06
1280x768	47.693	60.00
	60.091	75.00
	68.504	85.00
1280x960	60.023	60.02
1280x1024	63.981	60.02

RZ-50PX10/11/20/21 series

Accessories

Owner's Manual



Alkaline batteries

Remote Control handset

2-TV bracket bolts



D-sub 15 pin cable (Optional)

Power Cord

DVI Cable (Optional)

2-TV brackets
2-Wall brackets

Joinning the TV assembly to the wall to protect the set tumbling

- Secure the TV assembly by joinning it to a wall by using the TV/Wall brackets.

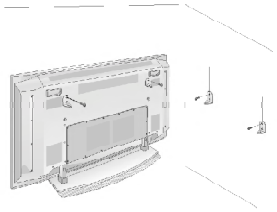

- After the set must be mounted on s desk top, install the TV brackets on the TV as shown.
  Insert the 2 bolts and tighten securely, in the upper holes on the bracket.
  Install the wall brackets on the wall with 4 bolts*, (not supplied with the product), as shown.
  Match the height of the TV brackets and the wall brackets.
  Check to be sure the brackets are tightened securely.

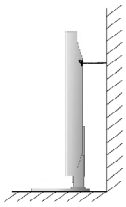

- Secure the TV assembly to the wall with strong strings or wound wire cables, (not supplied with the product), as shown.

Optional Extras

- Optional extras can be changed or modified for quality improvement without any notification new optional extras can be added.
- Contract your dealer for buying these items.

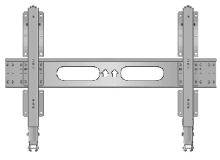

Tilt wall mounting bracket

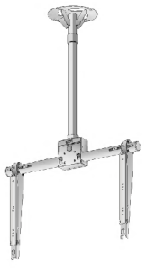

Ceiling mounting bracket

Video cables

Audio cables

Installation Options

- The set can be installed in different ways such as on a wall, or on a desktop etc.
- Install this set only in a location where adequate ventilation is available.
- This set is designed so that it can be mounted either horizontally or vertically.

Wall Mount: Horizontal Installation

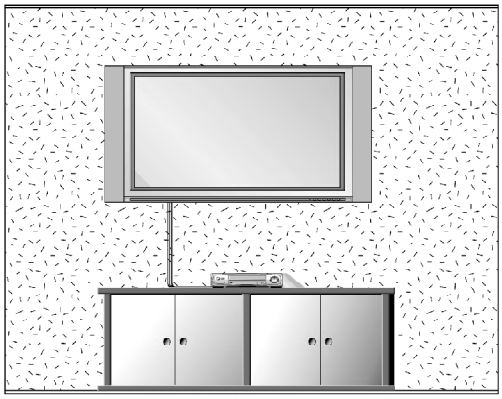

- The set can be installed on a wall as shown above. (For further information, refer to the optional 'Wall Mounting Bracket Installation and Setup Guide'.)
- Speakers are optional, and are shown for illustration only.

Desktop Pedestal Installation

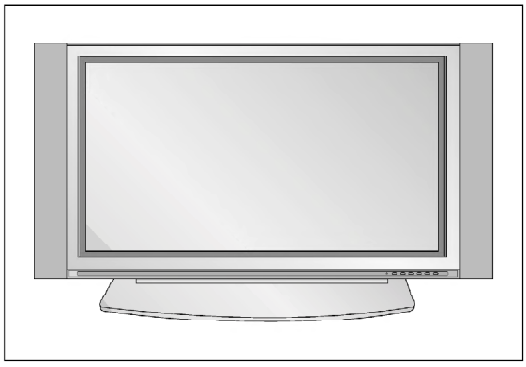

- The set can be mounted on a desk as shown above. (For further information, refer to the optional 'Desktop Stand Installation and Setup Guide'.)
- Speakers and speaker stands shown are optional, and are shown for example only.

To Mount on a Wall

Wall mount minimum allowable clearances for adequate ventilation.

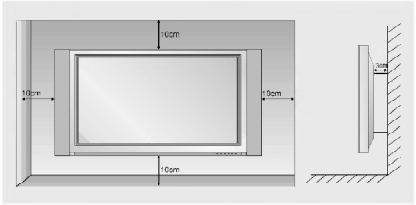

To Install on a Desktop

Pedestal mount minimum allowable clearances for adequate ventilation.

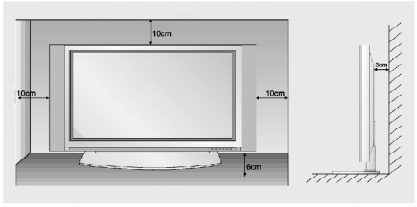

SPECIFICATIONS

NOTE : Specifications and others are subject to change without notice for improvement.

■ Application Range

This spec is applied to the 42"PDP TV used RF-043B Chassis.

■ Specification

Each part is tested as below without special appointment.

1) Temperature : 25¡ 5℃ (77¡ 9℉)
2) Relative Humidity: 65¡ 10%
3) Power Voltage: Standard Input voltage (100V-240V~, 50/60Hz)
   * Standard Voltage of each product is marked by models.
4) Specification and performance of each parts are followed each drawing and specification by part number in accordance with BOM.
5) The receiver must be operated for about 20 minutes prior to the adjustment.

■ Test and Inspection Method

1) Performance : LGE TV test method followed.
2) Demanded other specification
   Safety: CE, IEC specification
   EMC : CE, IEC

Model Name	Market	Remark
RZ-50PY10	EU	Safety : IEC/EN60065 EMI : EN55013 EMS : EN55020

■ General Specification

1. General Specification

No	Item	Specification	Remark
1	Display Screen Device	42 inch wide Color Display Module	PDP
2	Aspect Ratio	16:9	
3	PDP Module	PDP42V6xxxx, RGB Closed Type	
4	Screen Filter	45% Total light transmittance (E- Mesh)	Maker : NBK / Mitsui / LG Chemical
5	Operating Environment	1) Temp : 0~40 deg 2) Humidity : 0~85%	LGE SPEC
6	Storage Environment	1) Temp : -20~60 deg 2) Humidity : 0~85%	
7	Input Voltage	100 - 240V~, 50/60Hz	Maker : SONY /Murata / Sanken

2. Model Specification

No	Item	Specification	Remark
8	Market	EU	
9	Broadcasting	PAL B/G/I/D/K, SECAM L/L'	
10	Receiving system	Upper Heterodyne	
11	Scart Jack (3EA)	PAL, SECAM	
12	Video Input (2EA)	PAL, SECAM, NTSC	4 System : PAL, SECAM, NTSC, PAL60
13	S-Video Input(2EA)	PAL, SECAM, NTSC	4 System : PAL, SECAM, NTSC, PAL60
14	Component Input(1EA)	Y/Cb/Cr, Y/Pb/Pr	
15	RGB Input(1EA)	RGB-PC	
16	DVI Input(1EA)	DVI-PC	DVI-D
17	Audio Input(4EA)	PC Audio, Component, AV(2EA)	L/R Input
18	Wired Control	Discrete IR	

ADJUSTMENT INSTRUCTIONS

1. Application Object

These instructions apply to the RF-043B Chassis.

2. Specification

(1) Because this is not a hot chassis, it is not necessary to use an isolation transformer. However, the use of isolation transformer will help protect test instrument.
(2) Adjustment must be done in the correct order.
(3) The adjustment must be performed in the circumstance of 25±5℃ of temperature and 65±10% of relative humidity if there is no specific designation.
(4) The input voltage of the receiver must keep 100-220~, 50/60Hz.
(5) The receiver must be operated for about 15 minutes prior to the adjustment.

- After RGB Full white HEAT-RUN Mode, the receiver must be operated prior to adjustment.
- Enter into HEAT-RUN MODE
  1) Press the POWER ON KEY on R/C for adjustment.
  2) OSD display and screen display 100% full WHITE PATTERN.

※ Set is activated HEAT-RUN without signal generator in this mode.
※ Single color pattern(RED/BLUE/GREEN) of HEAT-RUN mode uses to check PANEL.

Caution) If you turn on a still screen more than 20 minutes (Especially digital pattern, cross hatch pattern), a after image may be occur in the black level part of the screen.

3. Channel memory

3-1. Setting up the LGIDS

(1) Install the LGIDS. (idsinst.exe)
After installation is completed, check if the file shown on (Fig. 1) has been created.
After using the right mouse button to click on 'LGIDS',

(Fig. 1)

(2) select 'Create Shortcut' from the menu with the left mouse button and move the shortcut icon onto the desktop.
(3) Double-click on the 'LGIDS' icon on the desktop to execute the program.

3-2. Channel memory Method

(1) Check if 'Malibu' has been selected on 'Model'.
(2) Check if 'Connection' under 'Communication' is 'OK'.
(3) If it is 'NG' , look on 'PORT'(COM1,2,3...) and make sure that it's on the right port.
(4) After connecting RS-232C cable, turn on the power.
If it the communication has been done correctly, 'READY' is displayed at the lower right corner of the window shown as (Fig. 2).

※ When the TV SET is not assembled completely and only the PCB is supplied by Stand-by 5V, download at the Stand-by state (LED is Red).

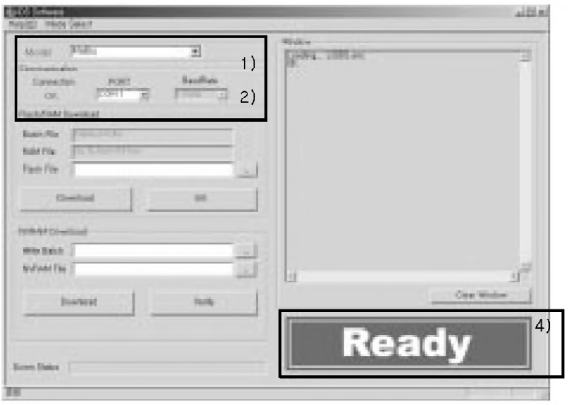

(Fig. 2)

(5) Select proper CH_memory file(*.nvm) for each model at [NVRAM Download] → [Write Batch]
Next, select proper binary file(*.bin) including the CH information for each model at [NVRAM File].
(6) Click the [Download] button.
It means the completion of the CH memory download if all items show 'OK' and Status is changed by 'PASS' at the lower right corner of the window.
(7) If you want to check whether the CH information is memorized correctly or not, click the [Verify] button.
And then compare NVRAM File(*.bin) with the CH information downloaded.

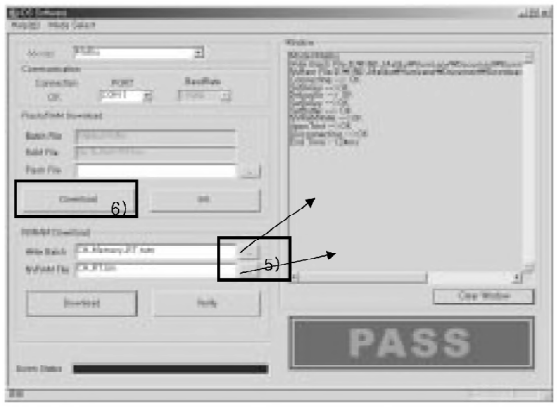

(Fig. 3)

4. HDCP Download

4-1. LGIDS Setting Method

(1) Click on 'setup' to install in your directory.
(2) After installation is completed, check if the file shown on (Fig. 4) has been created.
(3) Copy the KEY from source CD into the HDCP directory which was installed just now.
(DVI_orderNo_2003_data)

(4) After running HDCP(application program) which is inside

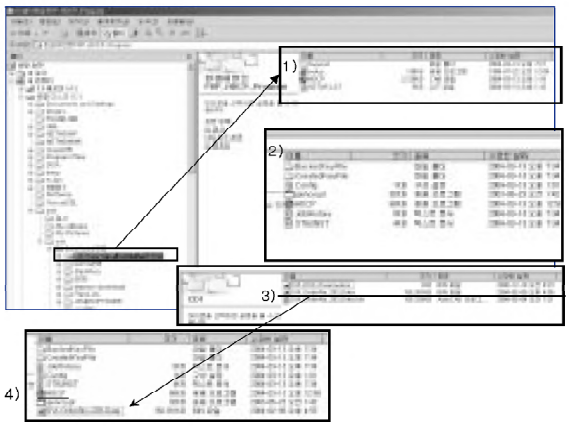

(Fig. 4)

the HDCP directory, setup the Communication.
Port : COM1(modification possible)
BaudRate : 115200

4-2. KEY Generation

(Fig. 5)

(1) Click on 'Key Generation (G)'.
(2) Input the number of the key in Generation count.
ex) If 100 Keys are required, then just register 100 and next time it will automatically get 101.

(3) Input file : When installing the program for the first time, you must find the original KEY that you copied and open it. It is crucial that you copy the original KEY into this directory.
When you use Generation, the information is recorded in Config.ini.
(4) Click on 'Generation' ——————————(1)
If it is done correctly, you will see "Job is Success."——(2)
Click on 'close'——————————(3)

(5) Check the Generation Data(Confirmation it's possible within HDCP\CreatedKeyFile)

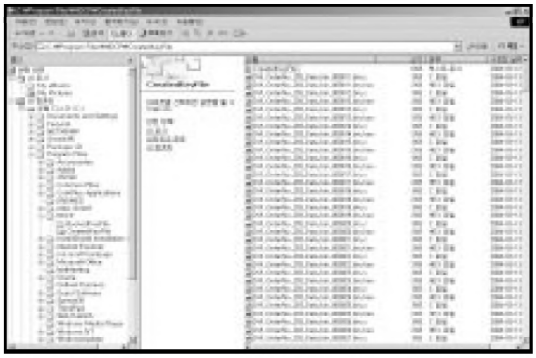

(Fig. 6)

(6) It is possible to check how many Generations are created at this point.
(Fig. 7) shows that you have created 130 Generations and you will start from 131 next time.

(Fig. 7)

4-3. HDCP Download Method

(1) Input power of Stand-By 5V.
(Download must be executed only when it is on Stand-by)
(2) The RS-232C(9PIN) must be connected to the COM1 on the PC.

(Fig. 8)

(3) If all the preparation is completed, click on 'Download'.

(Fig. 9) Normal State

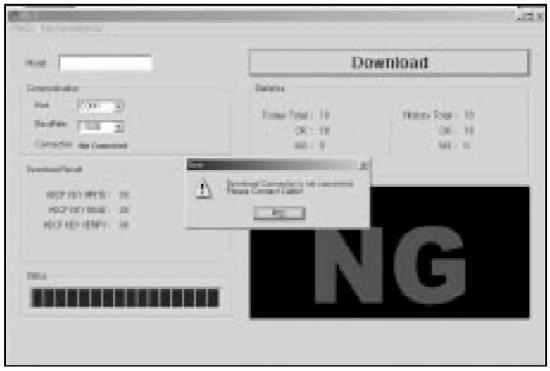

(Fig. 10) Abnormal State

(4) If abnormal state (Fig. 10) display then (3) execute.

Each PCB assembly must be checked by check JIG set.
(Because power PCB Assembly damages to PDP Module, especially be careful)

5. POWER PCB Assy Voltage Adjustments (Va, Vs Voltage Adjustments)

5-1. Test Equipment : D.M.M. 1EA

5-2. Connection Diagram for Measuring

Refer to (Fig 11).

5-3. Adjustment Method for P/No. 3501V00180A B/D

(1) Va Adjustment

1) After receiving 100% Full White Pattern, HEAT RUN.
2) Connect + terminal of D.M.M to Va pin of P805, connect - terminal to GND pin of P805.
3) After turning RV501, voltage of D.M.M adjustment as same as Va voltage which on lable of panel right/top (Deviation; ±0.5V)

(2) Vs Adjustment

1) Connect + terminal of D.M.M to Vs pin of P805, connect – terminal to GND pin of P805.
2) After turning RV401, voltage of D.M.M adjustment as same as Va voltage which on label of panel right/top. (Deviation; ±0.5V)

5-4. Adjustment Method for P/No. 3501V00182A B/D

(1) Va Adjustment

1) After receiving 100% Full White Pattern, HEAT RUN.
2) Connect + terminal of D.M.M to Va pin of P805, connect - terminal to GND pin of P805.
3) After turning RV601, voltage of D.M.M adjustment as same as Va voltage which on lable of panel right/top (Deviation; ±0.5V)

(2) Vs Adjustment

1) Connect + terminal of D.M.M to Vs pin of P805, connect – terminal to GND pin of P805.
2) After turning RV401, voltage of D.M.M adjustment as same as Va voltage which on label of panel right/top. (Deviation; ±0.5V)

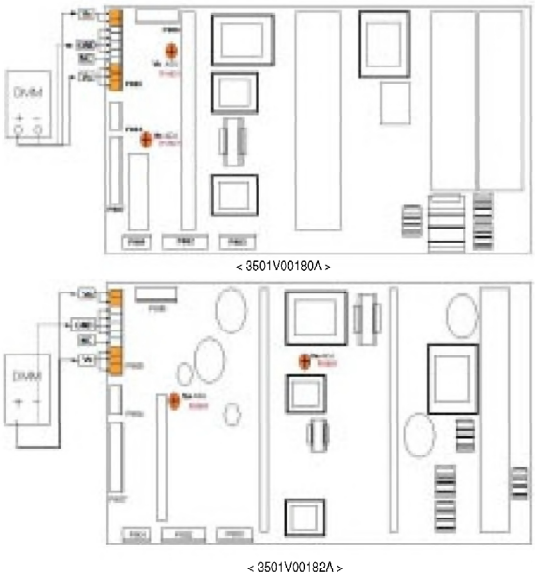

(Fig. 11) Connection Diagram of Power Adjustment for Measuring

6. DDC Data Input

6-1. Required Test Equipment

(1) A jig for adjusting PC, DDC (PC serial to D-sub Connection equipment)
(2) S/W for writing DDC (EDID Data Write & Read)
(3) D-sub 15P Cable, D-Sub to DVI Connector (Connect to DVI Jack)

6-2. Setting of Device

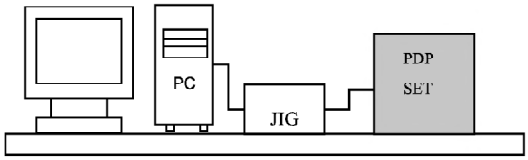

6-3. Preparation for Adjustment

(1) Set devices as above and turn the PC, jig on.
(2) Put S/W for writing DDC (EDID data Write & Read) into operation. (operated in DOS mode.)

6-4. Sequence of Adjustment

(1) DDC Data Input for Analog-RGB

1) Put the set on the table and turn the power on.
2) Connect PC Serial to D-sub 15P Cable of jig for DDC adjustment to RGB terminal (D-Sub 15Pin).
3) Operate S/W for DDC record and select DDC data for Analog RGB in Model Menu.
4) Operate EDID Write command.
5) Operate EDID Read command and check whether Check Sum is 53.
6) If Check Sum is not 53, repeat 3) ~ 4).
7) If Check Sum is 53, DDC data for Analog-RGB input is completed.

(2) DDC Data input for Digital-RGB(DVI)

1) Connect PC Serial to DVI Cable of jig for DDC adjustment to DVI terminal (DVI Jack).
2) Operate S/W for DDC record and select DDC data for digital RGB in model menu.
3) Operate EDID Write command.
4) Operate EDID Read command and check whether Check sum is D2(1page), BF(2page).
5) If Check sum is not D2(1page), BF(2page), repeat 3) ~ 4).
6) If Check sum is D2(1page), BF(2page), DDC data for Analog-RGB input is completed.

7. Adjustment of White Balance

7-1. Required Equipment

Color Analyzer (CA-100 or same product)

7-2. Connection Diagram of Equipment for Measuring

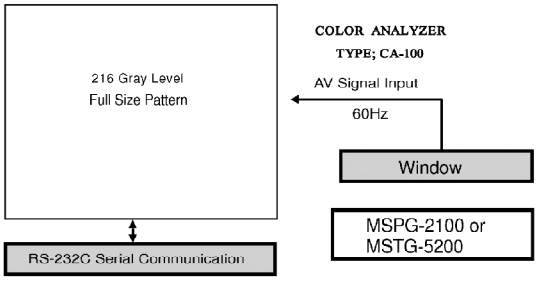

(Fig. 12) White Balance Adjustment

7-3. Adjustment of Whlte Balance

- Operate the Zero-calibration of the CA-100, then stick sensor to PDP module surface when you adjust.
- For manual adjustment, it is also possible by the following sequence.

(1) Select white pattern of heat-run mode by pressing power on key on remote control for adjustment then operate heat run more than 15 minutes.
(2) Supply Gray Pattern (216 Level Full Size Pattern: Signal level=0.59V±0.03V) signal to VIDEO input. (AV2 Input 60Hz) (Refer to Fig. 12)
(3) Press the FRONT-AV KEY on R/C for converting input mode.
(4) To adjust, stick sensor to 216 Gray Level Pattern, press ADJ key twice(White Balance) on remote control.
For adjustment and ▲, ▼ on remote control for adjustment mode to select Red Gain and Green Gain, press VOL +, - Key and adjust it until color coordination becomes as below.
* 216 Gray level=Signal level 0.59V±0.03V

X; 0.283±0.003, Y; 0.297±0.003
Color Temperature; 9,300°K±500°K

(5) Exit adjustment mode using ■ Key.

8. Auto Component Color Balance

8-1. Required Test Equipment

Pattern Equipment: MSP3240A or same product
(16 Gray Scale Pattern output(Component output Level: 0.7Vp-p)

8-2. Method of Auto RGB Color Balance

(1) Input RGB Source : Component 480p/576p 16 Gray Scale Pattern
At this time, except Pb and Pr signal, only Y signal insert.
(2) Press ADJ KEY on R/C for adjustment.
(3) Press Vol. + KEY and operate To set.
(4) Auto-RGB OK means completed adjustment.

9. Auto RGB Color Balance

9-1. Required Test Equipment

Pattern Equipment: PC Pattern Generator (VG828, VG854, 801GF, MSP3240A)
(16 Gray Scale Pattern output(RGB output Level: 0.7Vp-p)

9-2. Method of Auto RGB Color Balance

(1) Input RGB Source : 16 Gray Scale Pattern output (RGB output Level : 0.7Vp-p)
(2) Press ADJ KEY on R/C for adjustment.
(3) Press Vol. + KEY and operate To SET.
(4) Auto-RGB OK means completed adjustment.

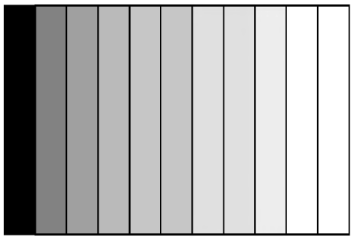

(Fig. 13) Auto RGB/ Component Color Balance Test Pattern

10. Auto Adjustment Map(RS-232C)

RF-043B						
Type		RS232				
Baud Rate		Data bit		Stop bit	Parity	
115200		8		1	NONE	
Protocol Setting	Index	Cmd1	Cmd2	Data	Min Value	Max Value
	R Gain	j	a		00(00)	255(FF)
	G Gain	j	b		00(00)	255(FF)
	B Gain	j	c		00(00)	255(FF)
	R Offset	j	d		00(00)	255(FF)
	G Offset	j	e		00(00)	255(FF)
	B Offset	j	f		00(00)	255(FF)

TROUBLE SHOOTING GUIDE

1. Power Board

1-1. The whole flowchart which it follows in voltage output state

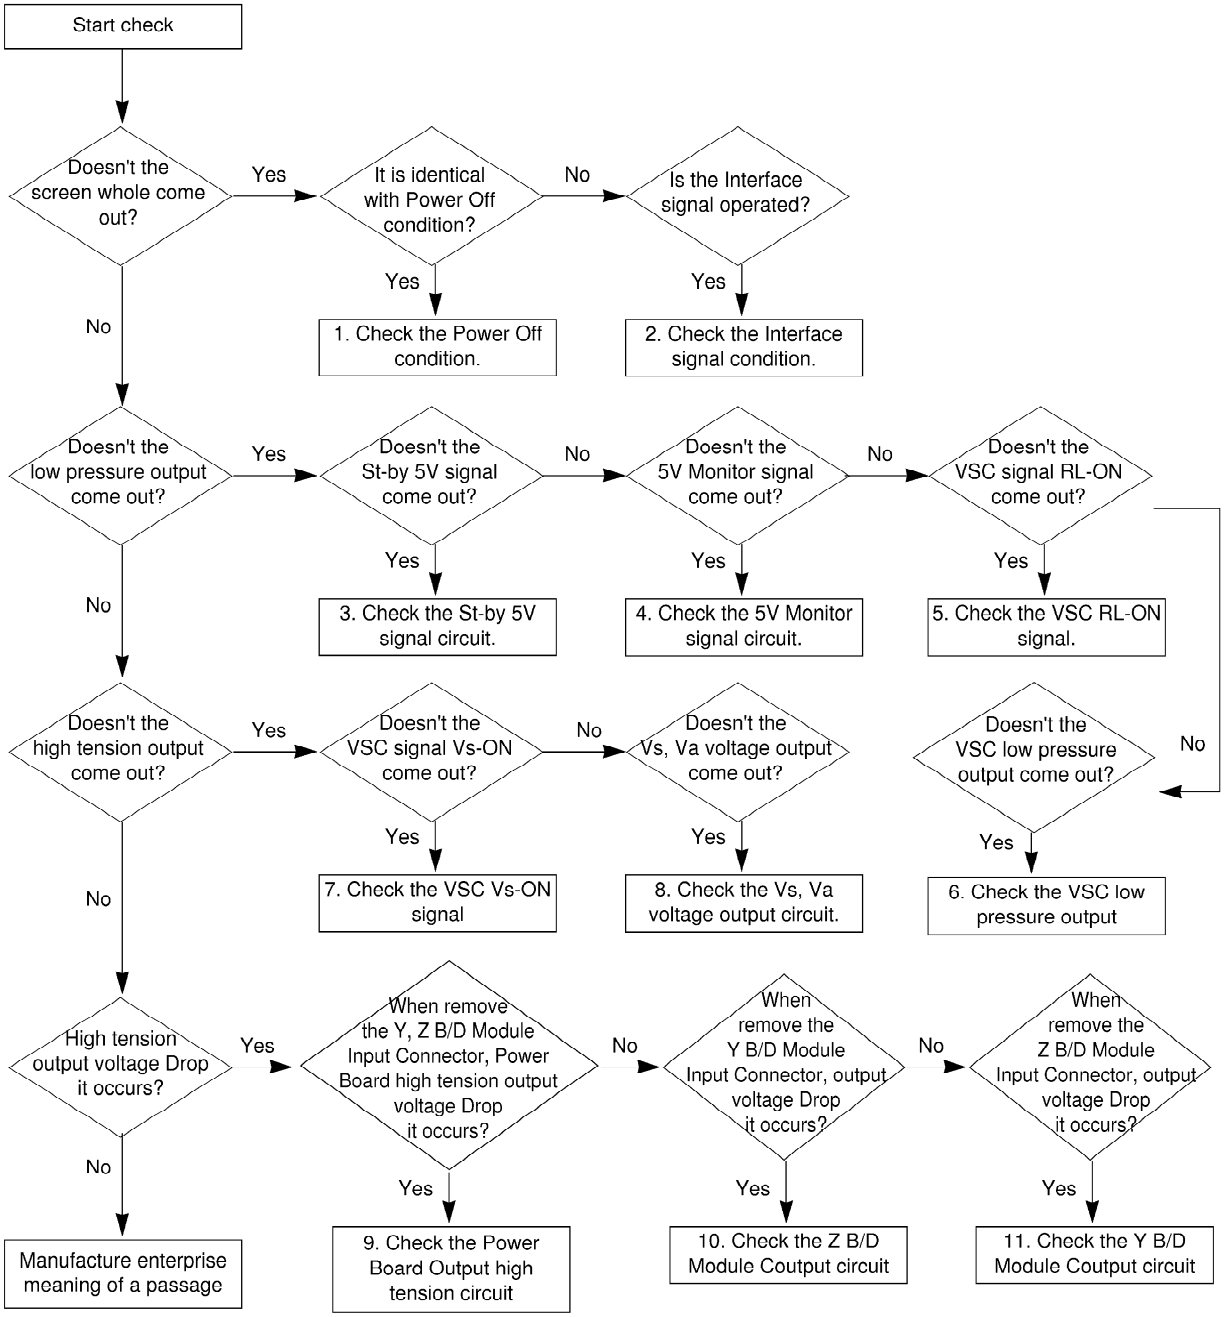
Start check
Doesn't the screen whole come out?
Yes
It is identical with Power Off condition?
No
Is the Interface signal operated?
Yes
1. Check the Power Off condition.
Yes
2. Check the Interface signal condition.
No
Doesn't the low pressure output come out?
Yes
Doesn't the St-by 5V signal come out?
No
Doesn't the 5V Monitor signal come out?
No
Doesn't the VSC signal RL-ON come out?
Yes
3. Check the St-by 5V signal circuit.
Yes
4. Check the 5V Monitor signal circuit.
Yes
5. Check the VSC RL-ON signal.
No
Doesn't the high tension output come out?
Yes
Doesn't the VSC signal Vs-ON come out?
No
Doesn't the Vs, Va voltage output come out?
Doesn't the VSC low pressure output come out?
No
Yes
7. Check the VSC Vs-ON signal
Yes
8. Check the Vs, Va voltage output circuit.
Yes
6. Check the VSC low pressure output
No
High tension output voltage Drop it occurs?
Yes
When remove the Y, Z B/D Module Input Connector, Power Board high tension output voltage Drop it occurs?
No
When remove the Y B/D Module Input Connector, output voltage Drop it occurs?
No
When remove the Z B/D Module Input Connector, output voltage Drop it occurs?
No
Manufacture enterprise meaning of a passage
Yes
9. Check the Power Board Output high tension circuit
Yes
10. Check the Z B/D Module Coutput circuit
Yes
11. Check the Y B/D Module Coutput circuit

1-2. Sony Power Board Structure

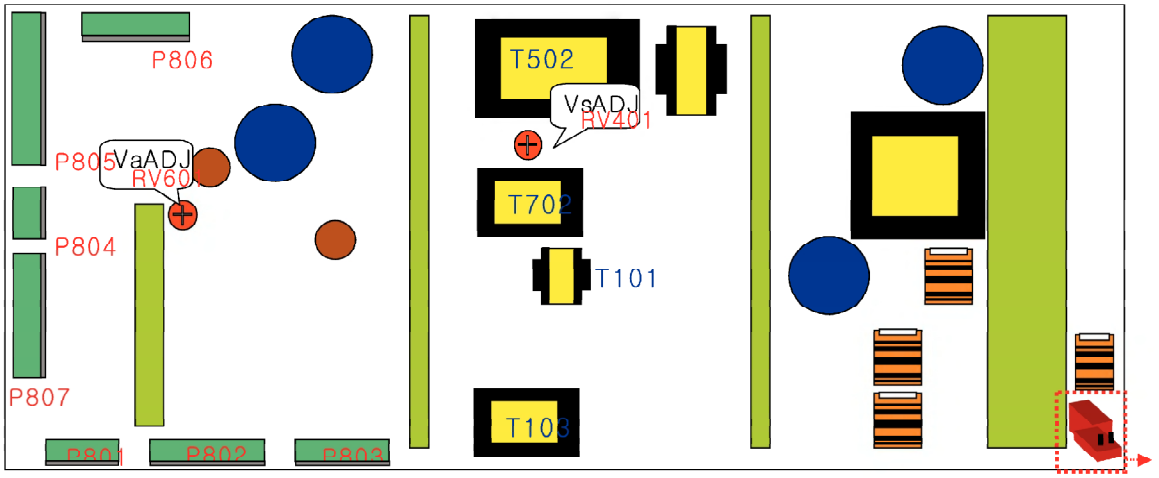

PIN No	1	2	3	4	5	6	7	8	9	10	11	12
P801	POD	5V MNT	VS ON	GND	STBY5V	RL ON	A ON					
P802	GND	GND	12V	12V	GND	GND	6V	6V	GND	GND	3.4V	3.4V
P803	GND	12V	GND	3.4V	GND	6V	GND	GND	25V	25V		
P804	GND	GND	5V	5V								
P805	Vs	Vs	Vs	NC	GND	GND	GND	GND	Va	Va		
P806	5V	GND	Va	GND	GND	NC	Vs	Vs				
P807	5V	5V	5V	5V	GND	GND	GND	GND				

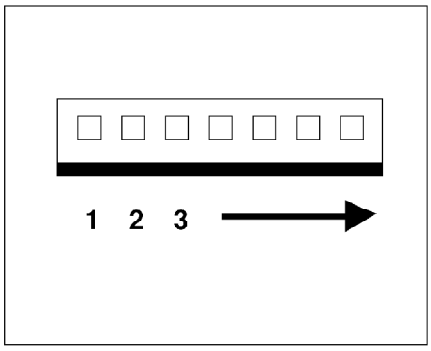

T502: Vs Trans

T702: Va Trans

T101: St-by Trans

T103: Low Voltage Trans

1-3. Sanken Power Board Structure

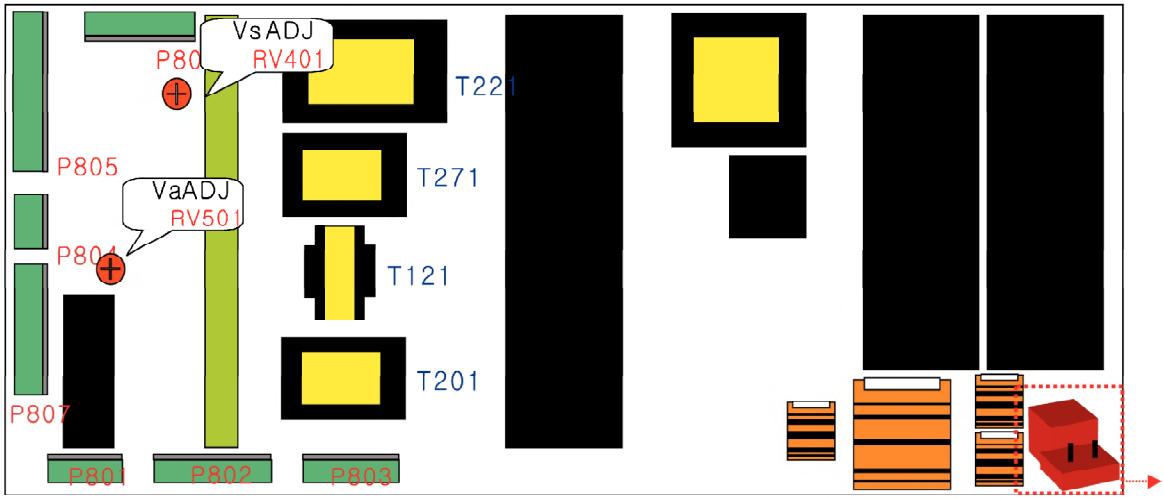

PIN No	1	2	3	4	5	6	7	8	9	10	11	12
P801	POD	5V-MNT	VS-ON	GND	STBY5V	RL-ON	A-ON					
P802	GND	GND	12V	12V	GND	GND	6V	6V	GND	GND	3.4V	3.4V
P803	GND	12V	GND	3.4V	GND	6V	GND	GND	19V	19V		
P804	GND	GND	5V	5V								
P805	Vs	Vs	Vs	NC	GND	GND	GND	GND	Va	Va		
P806	5V	GND	Va	GND	GND	NC	Vs	Vs				
P807	5V	5V	5V	5V	GND	GND	GND	GND				

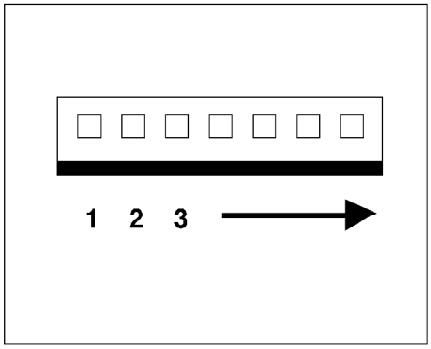

T221: Vs Trans

T271: Va Trans

T121: St-by Trans

T201: Low Voltage Trans

2. No Power

(1) Symptom

- Does't minute discharge at module.
- Non does not come in into the front LED.

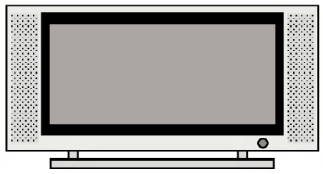

(2) Check follow

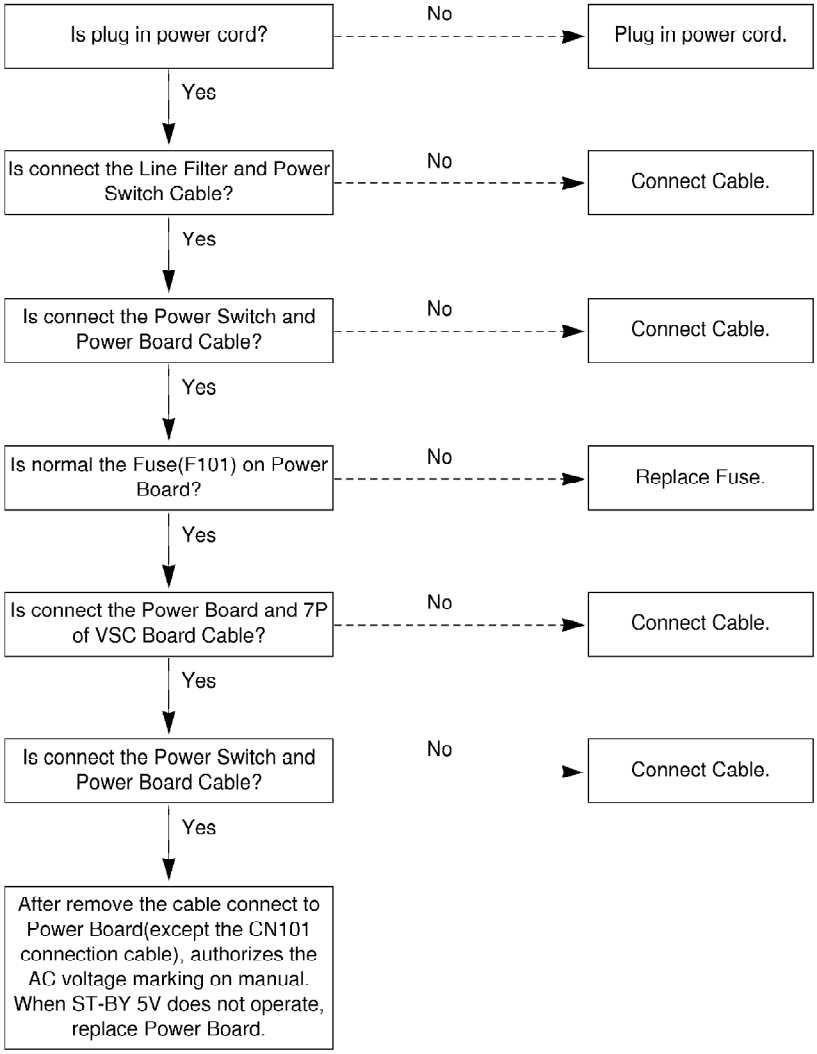
Is plug in power cord?
No
Plug in power cord.
Yes
Is connect the Line Filter and Power Switch Cable?
No
Connect Cable.
Yes
Is connect the Power Switch and Power Board Cable?
No
Connect Cable.
Yes
Is normal the Fuse(F101) on Power Board?
No
Replace Fuse.
Yes
Is connect the Power Board and 7P of VSC Board Cable?
No
Connect Cable.
Yes
Is connect the Power Switch and Power Board Cable?
No
Connect Cable.
Yes
After remove the cable connect to Power Board(except the CN101 connection cable), authorizes the AC voltage marking on manual. When ST-BY 5V does not operate, replace Power Board.

3. Protect Mode

(1) Symptom

- After once shining, it does not discharge minutely from module
- The Rely falls(The sound is audible "click")
- It is converted with the color where the front LED is red from green.

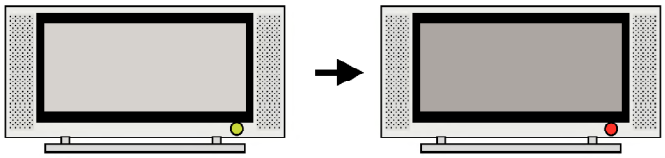

(2) Check follow

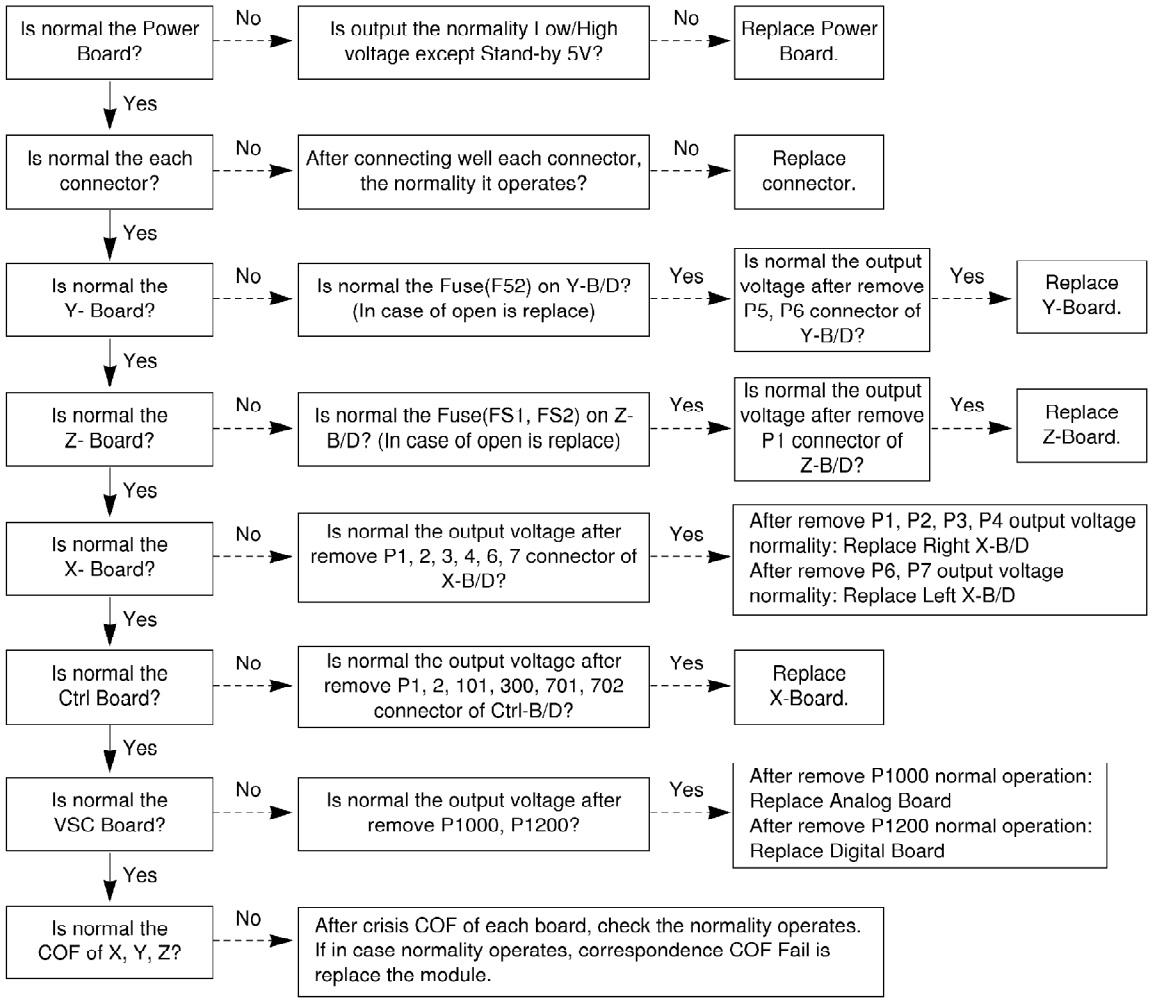
Is normal the Power Board?
No
Is output the normality Low/High voltage except Stand-by 5V?
No
Replace Power Board.
Yes
Is normal the each connector?
No
After connecting well each connector, the normality it operates?
No
Replace connector.
Yes
Is normal the Y- Board?
No
Is normal the Fuse(F52) on Y-B/D? (In case of open is replace)
Yes
Is normal the output voltage after remove P5, P6 connector of Y-B/D?
Yes
Replace Y-Board.
Yes
Is normal the Z- Board?
No
Is normal the Fuse(FS1, FS2) on Z-B/D? (In case of open is replace)
Yes
Is normal the output voltage after remove P1 connector of Z-B/D?
Yes
Replace Z-Board.
Yes
Is normal the X- Board?
No
Is normal the output voltage after remove P1, 2, 3, 4, 6, 7 connector of X-B/D?
Yes
After remove P1, P2, P3, P4 output voltage normality: Replace Right X-B/D
After remove P6, P7 output voltage normality: Replace Left X-B/D
Yes
Is normal the Ctrl Board?
No
Is normal the output voltage after remove P1, 2, 101, 300, 701, 702 connector of Ctrl-B/D?
Yes
Replace X-Board.
Yes
Is normal the VSC Board?
No
Is normal the output voltage after remove P1000, P1200?
Yes
After remove P1000 normal operation: Replace Analog Board
After remove P1200 normal operation: Replace Digital Board
Yes
Is normal the COF of X, Y, Z?
No
After crisis COF of each board, check the normality operates. If in case normality operates, correspondence COF Fail is replace the module.

4. No Raster

(1) Symptom

- Does't minute discharge at module.
- It maintains the condition where the front LED is green.

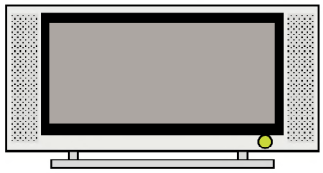

(2) Check follow

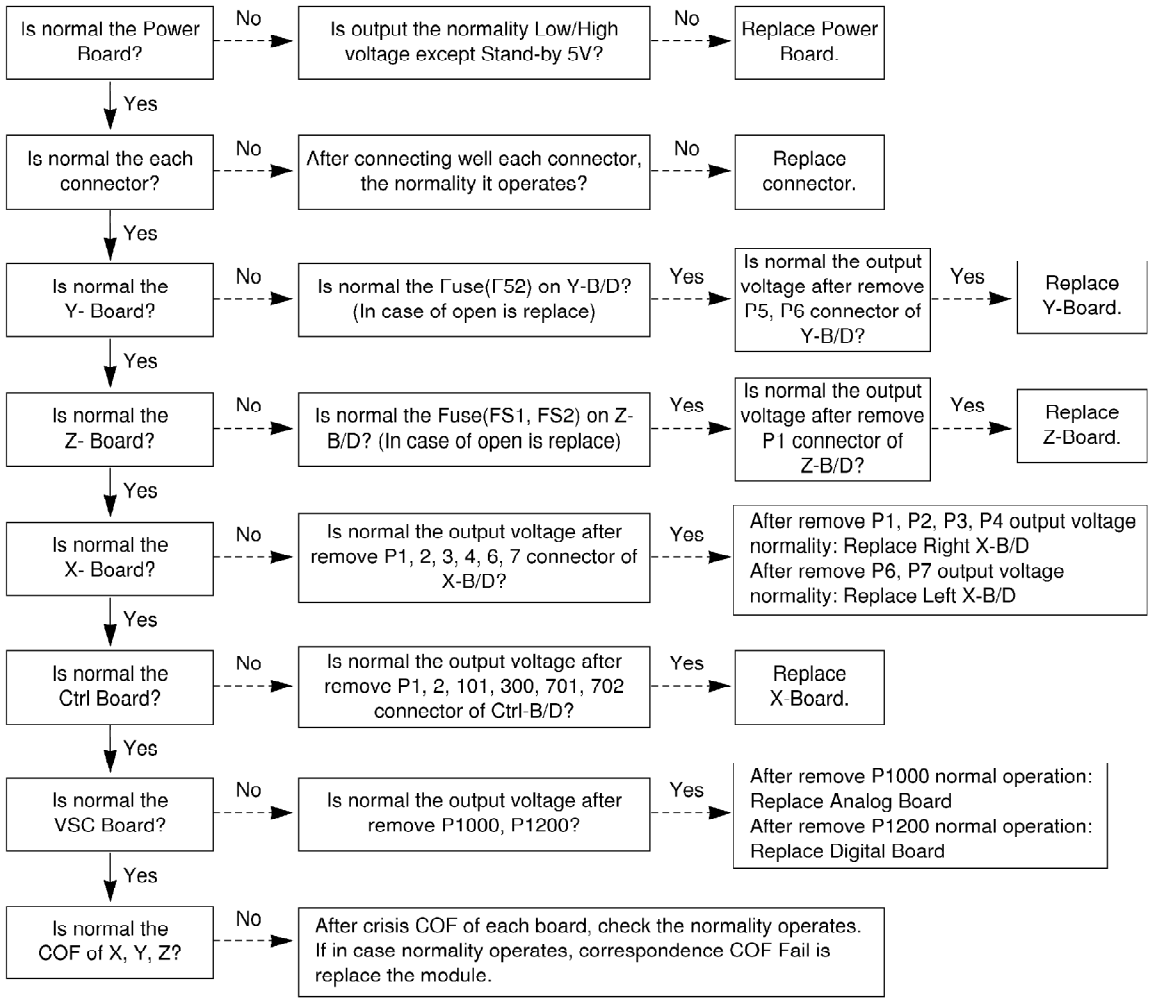
Is normal the Power Board?
No
Is output the normality Low/High voltage except Stand-by 5V?
No
Replace Power Board.
Yes
Is normal the each connector?
No
After connecting well each connector, the normality it operates?
No
Replace connector.
Yes
Is normal the Y- Board?
No
Is normal the Fuse(F52) on Y-B/D? (In case of open is replace)
Yes
Is normal the output voltage after remove P5, P6 connector of Y-B/D?
Yes
Replace Y-Board.
Yes
Is normal the Z- Board?
No
Is normal the Fuse(FS1, FS2) on Z-B/D? (In case of open is replace)
Yes
Is normal the output voltage after remove P1 connector of Z-B/D?
Yes
Replace Z-Board.
Yes
Is normal the X- Board?
No
Is normal the output voltage after remove P1, 2, 3, 4, 6, 7 connector of X-B/D?
Yes
After remove P1, P2, P3, P4 output voltage normality: Replace Right X-B/D
After remove P6, P7 output voltage normality: Replace Left X-B/D
Yes
Is normal the Ctrl Board?
No
Is normal the output voltage after remove P1, 2, 101, 300, 701, 702 connector of Ctrl-B/D?
Yes
Replace X-Board.
Yes
Is normal the VSC Board?
No
Is normal the output voltage after remove P1000, P1200?
Yes
After remove P1000 normal operation: Replace Analog Board
After remove P1200 normal operation: Replace Digital Board
Yes
Is normal the COF of X, Y, Z?
No
After crisis COF of each board, check the normality operates. If in case normality operates, correspondence COF Fail is replace the module.

5. In case of occur strange screen into specific mode

5-1. In case of does't display the OSD

(1) Symptom

- LED is green
- The minute discharge continuously becomes accomplished from module

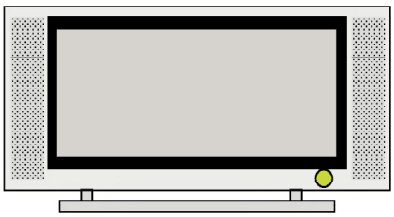

(2) Check follow

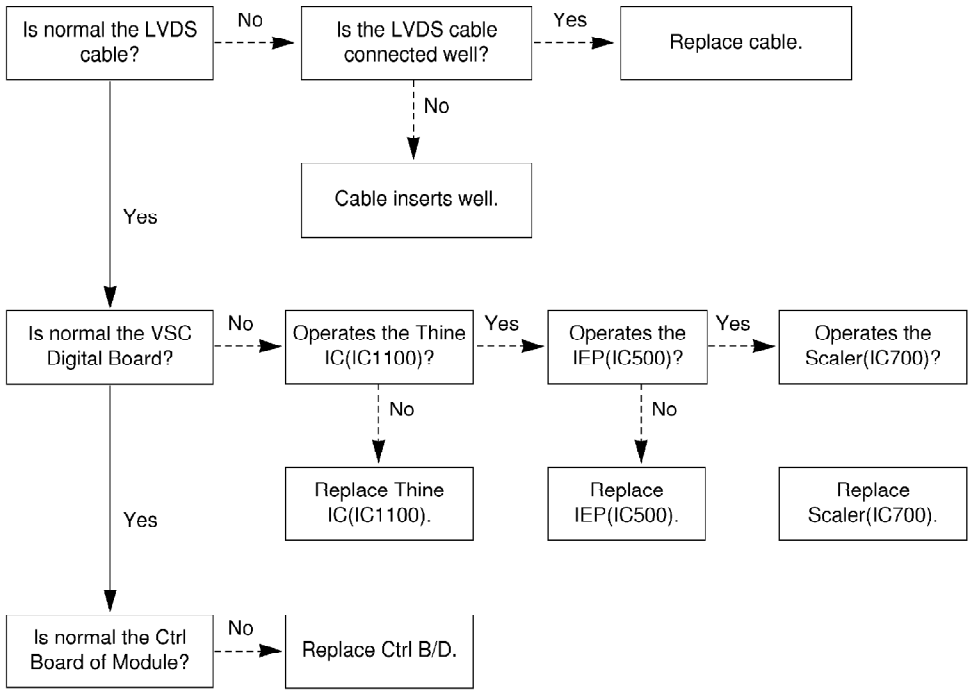

5-2. In case of does't display the screen into specific mode

(1) Symptom

- The screen does not become the display from specific input mode (RF, AV, Component, RGB, DVI).

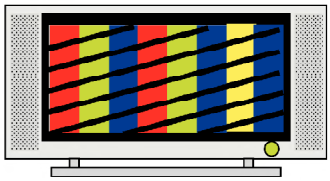

(2) Check follow

- Check the all input mode should become normality display.
- Check the Video(Main)/Data(Sub), Video(Main)/Video(Sub) should become normality display from the PIP mode or DW mode. (Re-Check it Swap)

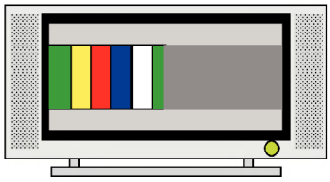

(3) In case of becomes unusual display from RF mode

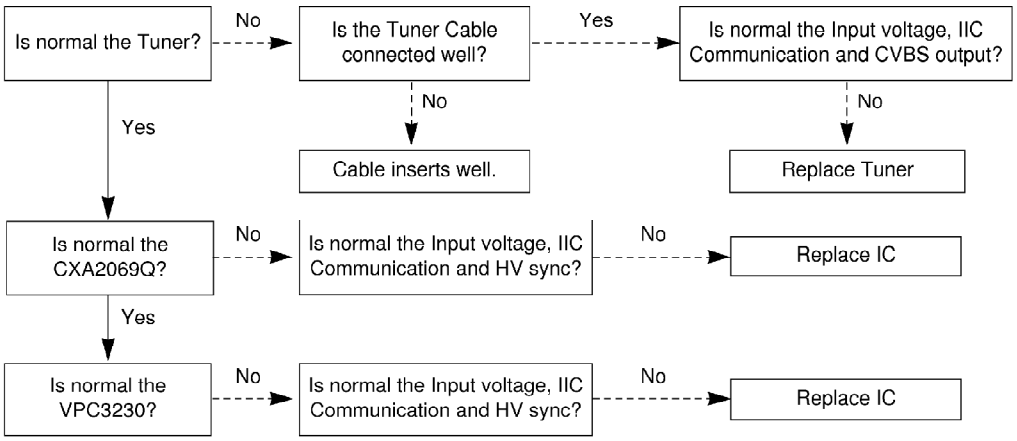

(4) In the case of becomes unusual display from RF, AV mode

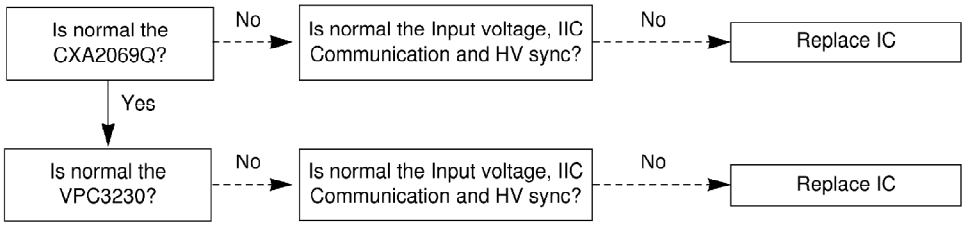

(5) In the case of becomes unusual display from RF, AV, Component 480i mode

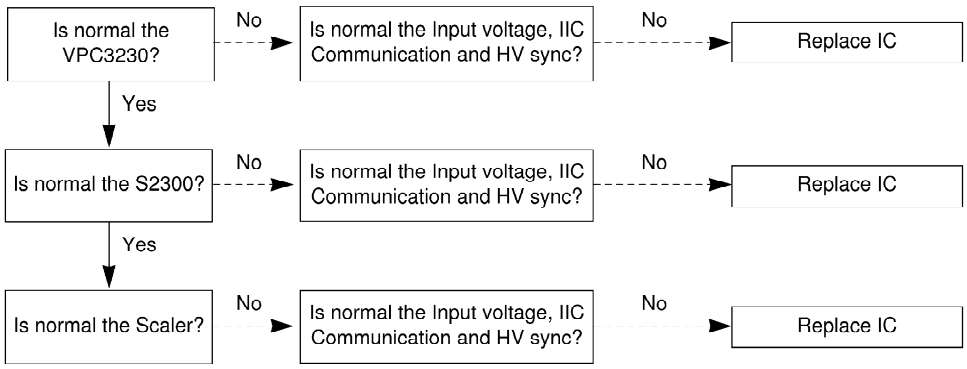

(6) In the case of becomes unusual display from Component DTV mode

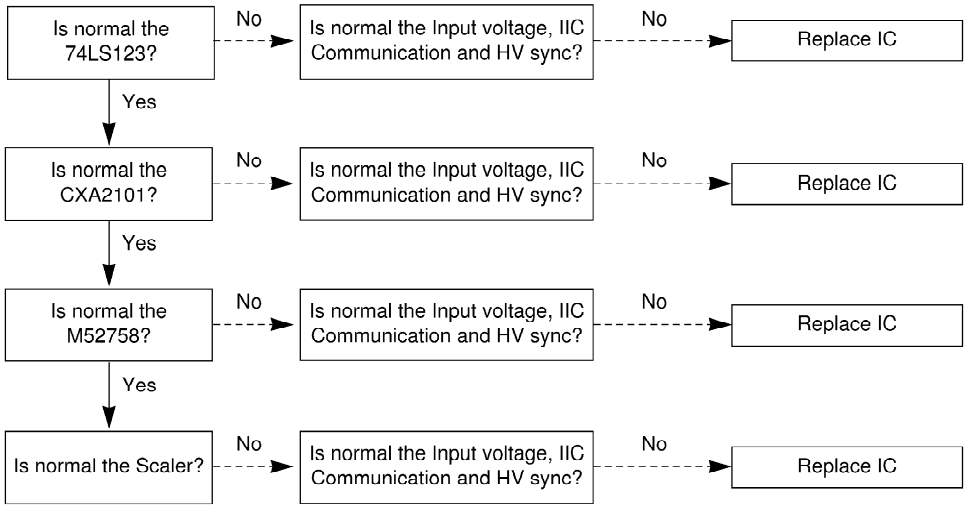

(7) In the case of becomes unusual display from RGB DTV mode

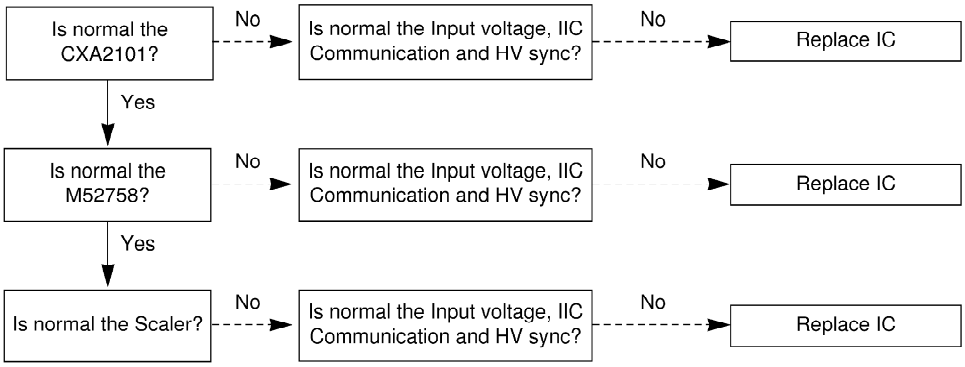

(8) In the case of becomes unusual display from RGB PC mode

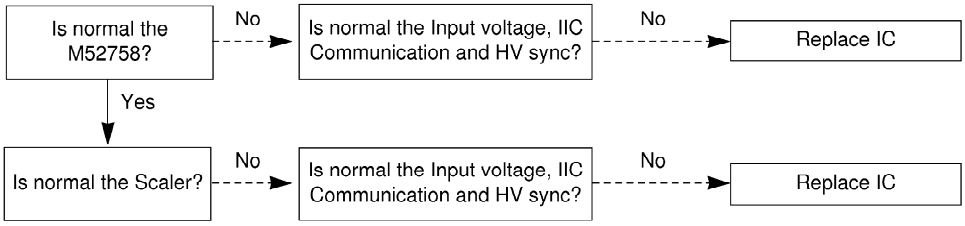

(8) In the case of becomes unusual display from DVI mode



6. In case of no sound

(1) Symptom

- LED is green
- Screen display but sound is not output

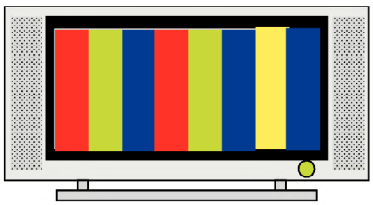

(2) Check follow

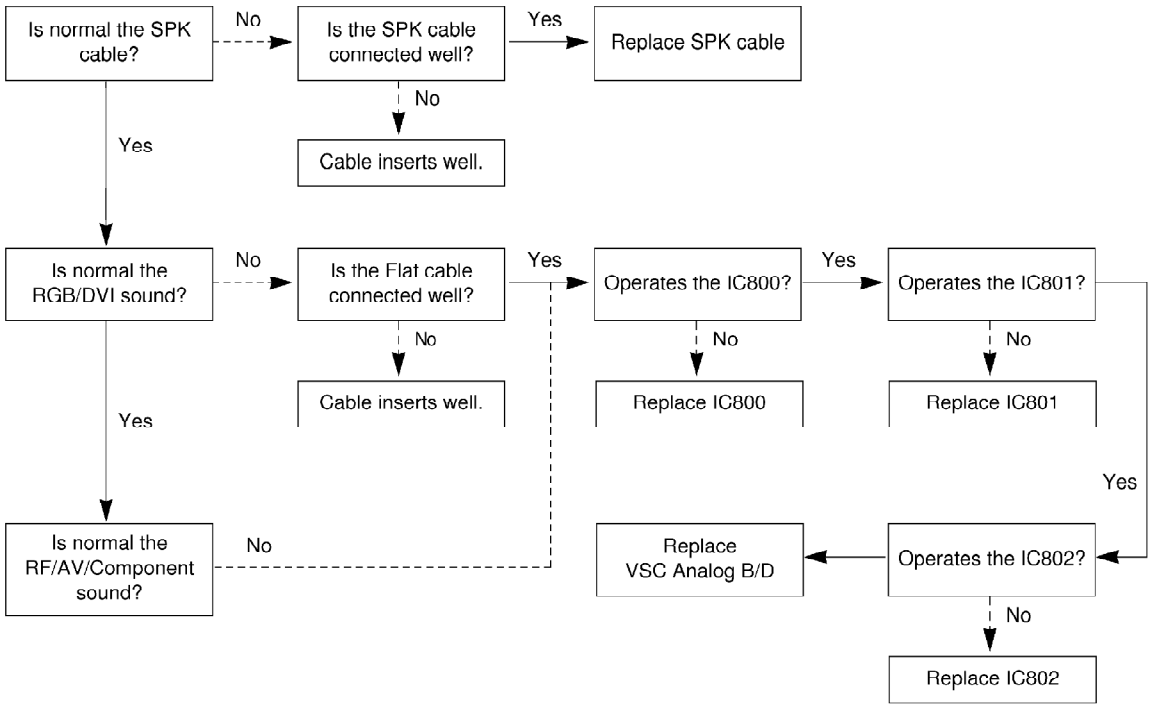

BLOCK DIAGRAM

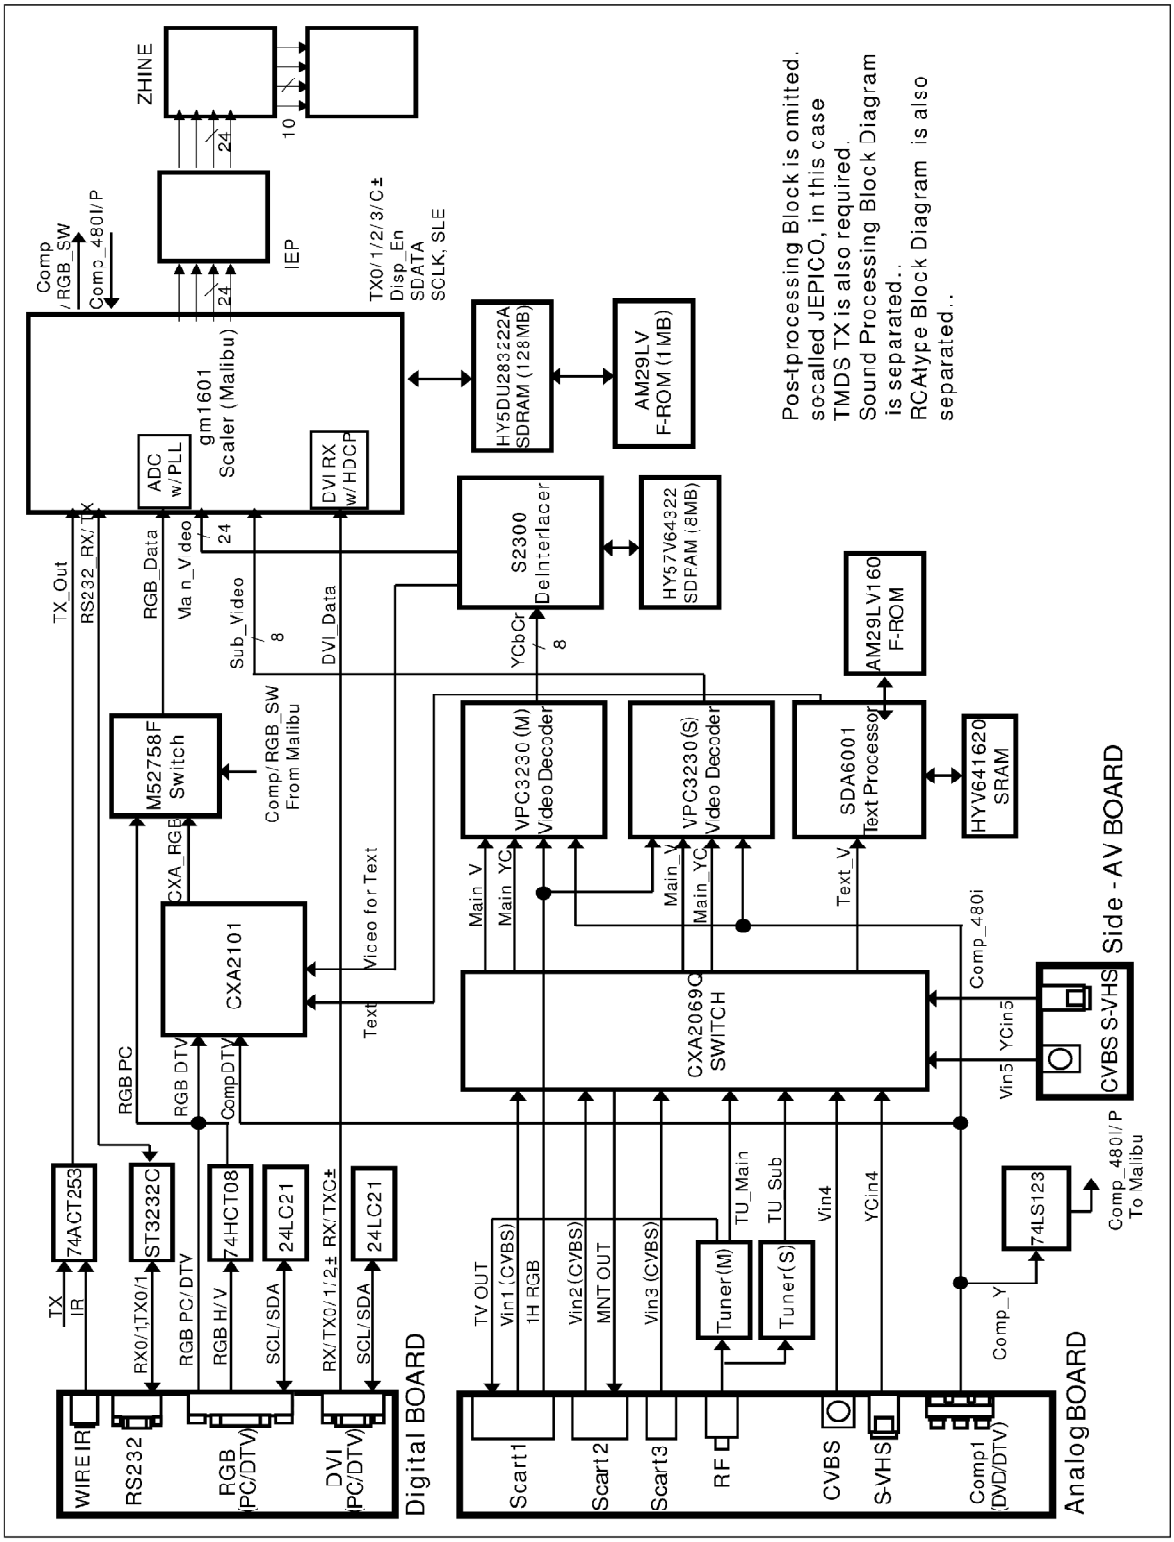

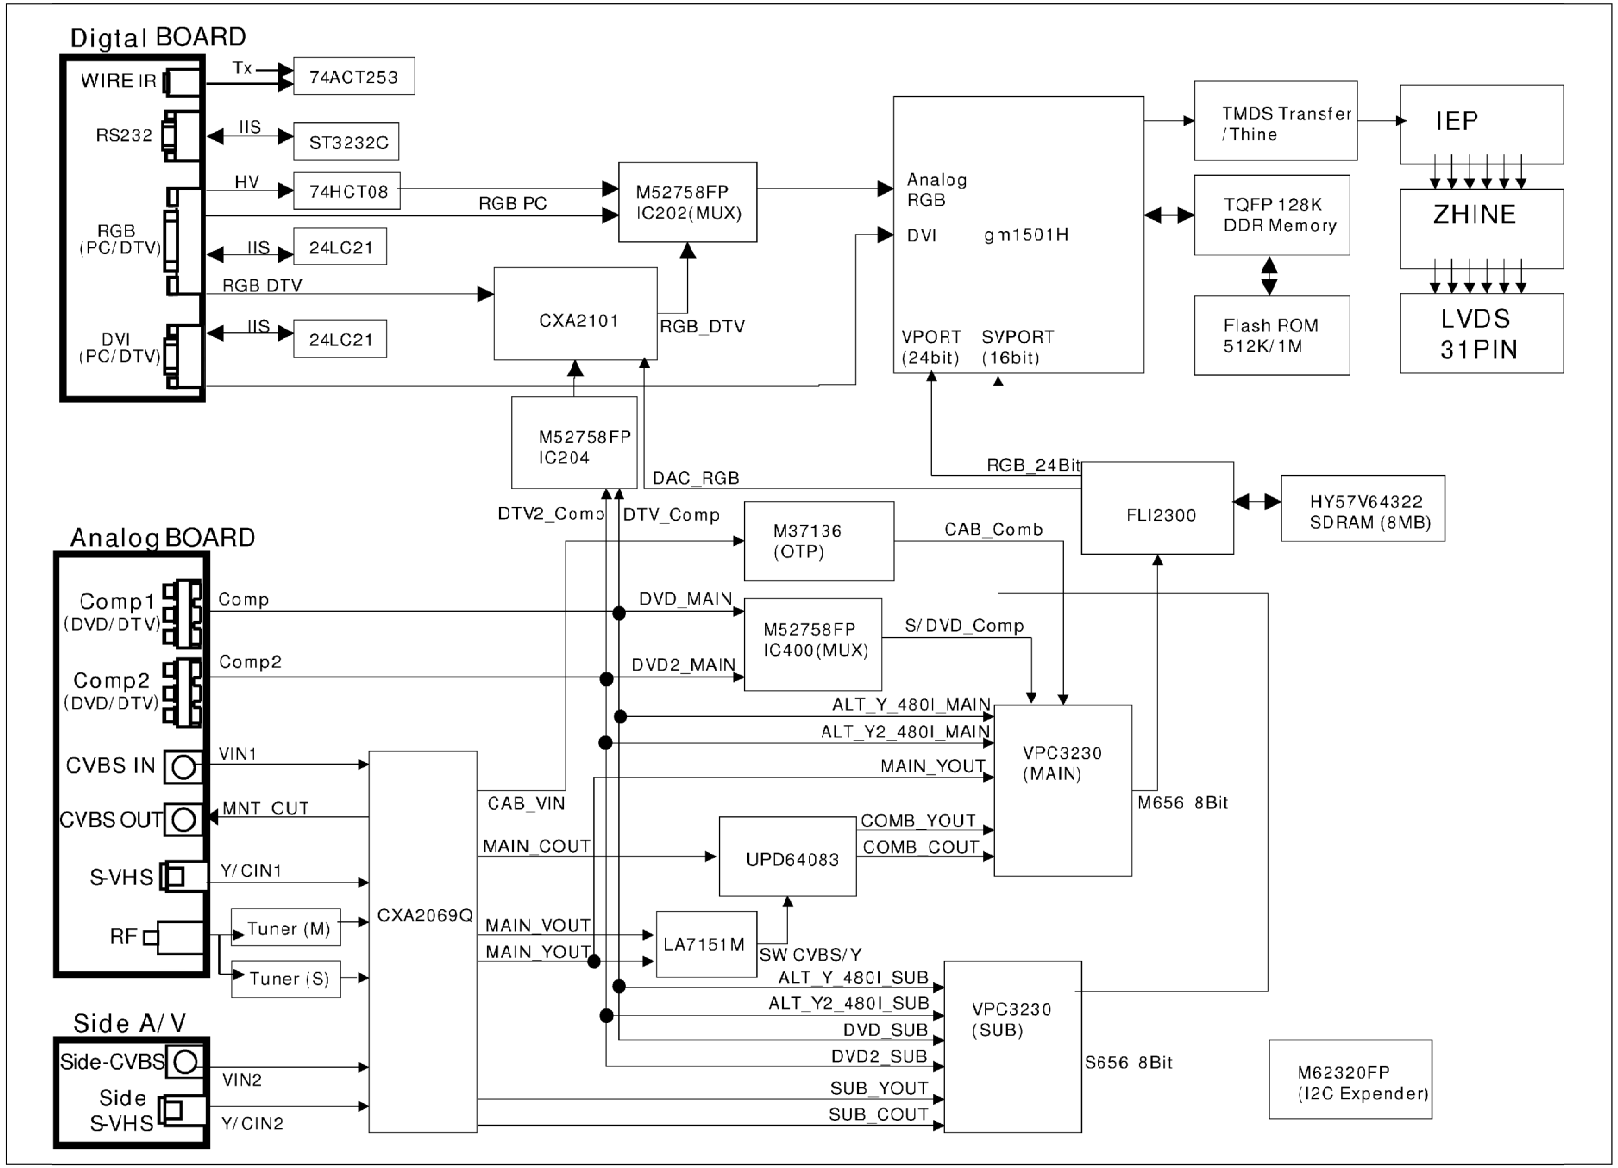
Digtal BOARD
WIRE IR
RS232
RGB (PC/DTV)
DVI (PC/DTV)
Tx
74ACT253
IIS
ST3232C
HV
74HCT08
RGB PC
IIS
24LC21
RGB DTV
IIS
24LC21
M52758FP IC202(MUX)
CXA2101
RGB_DTV
M52758FP IC204
Analog RGB
DVI gm1501H
VPORT (24bit)
SYPORT (16bit)
TMDS Transfer /Thine
TQFP 128K DDR Memory
Flash ROM 512K/1M
IEP
ZHINE
LVDS 31PIN
DAC_RGB
RGB_24Bit
FLI2300
HY57V64322 SDRAM (8MB)
DTV2_Comp
DTV_Comp
M37136 (OTP)
CAB_Comb
Analog BOARD
Comp1 (DVD/DTV)
Comp2 (DVD/DTV)
CVBS IN
CVBS OUT
S-VHS
RF
Comp
Comp2
VIN1
MNT_CUT
Y/CIN1
Tuner (M)
Tuner (S)
CXA2069Q
DVD_MAIN
DVD2_MAIN
M52758FP IC400(MUX)
S/DVD_Comp
ALT_Y_480I_MAIN
ALT_Y2_480I_MAIN
MAIN_YOUT
VPC3230 (MAIN)
M656 8Bit
CAB_VIN
MAIN_COUT
UPD64083
COMB_YOUT
COMB_COUT
MAIN_VOUT
MAIN_YOUT
LA7151M
SW CVBS/Y
ALT_Y_480I_SUB
ALT_Y2_480I_SUB
DVD_SUB
DVD2_SUB
SUB_YOUT
SUB_COUT
VPC3230 (SUB)
S656 8Bit
M62320FP (I2C Expender)
Side A/V
Side-CVBS
Side S-VHS
VIN2
Y/CIN2

EXPLODED VIEW

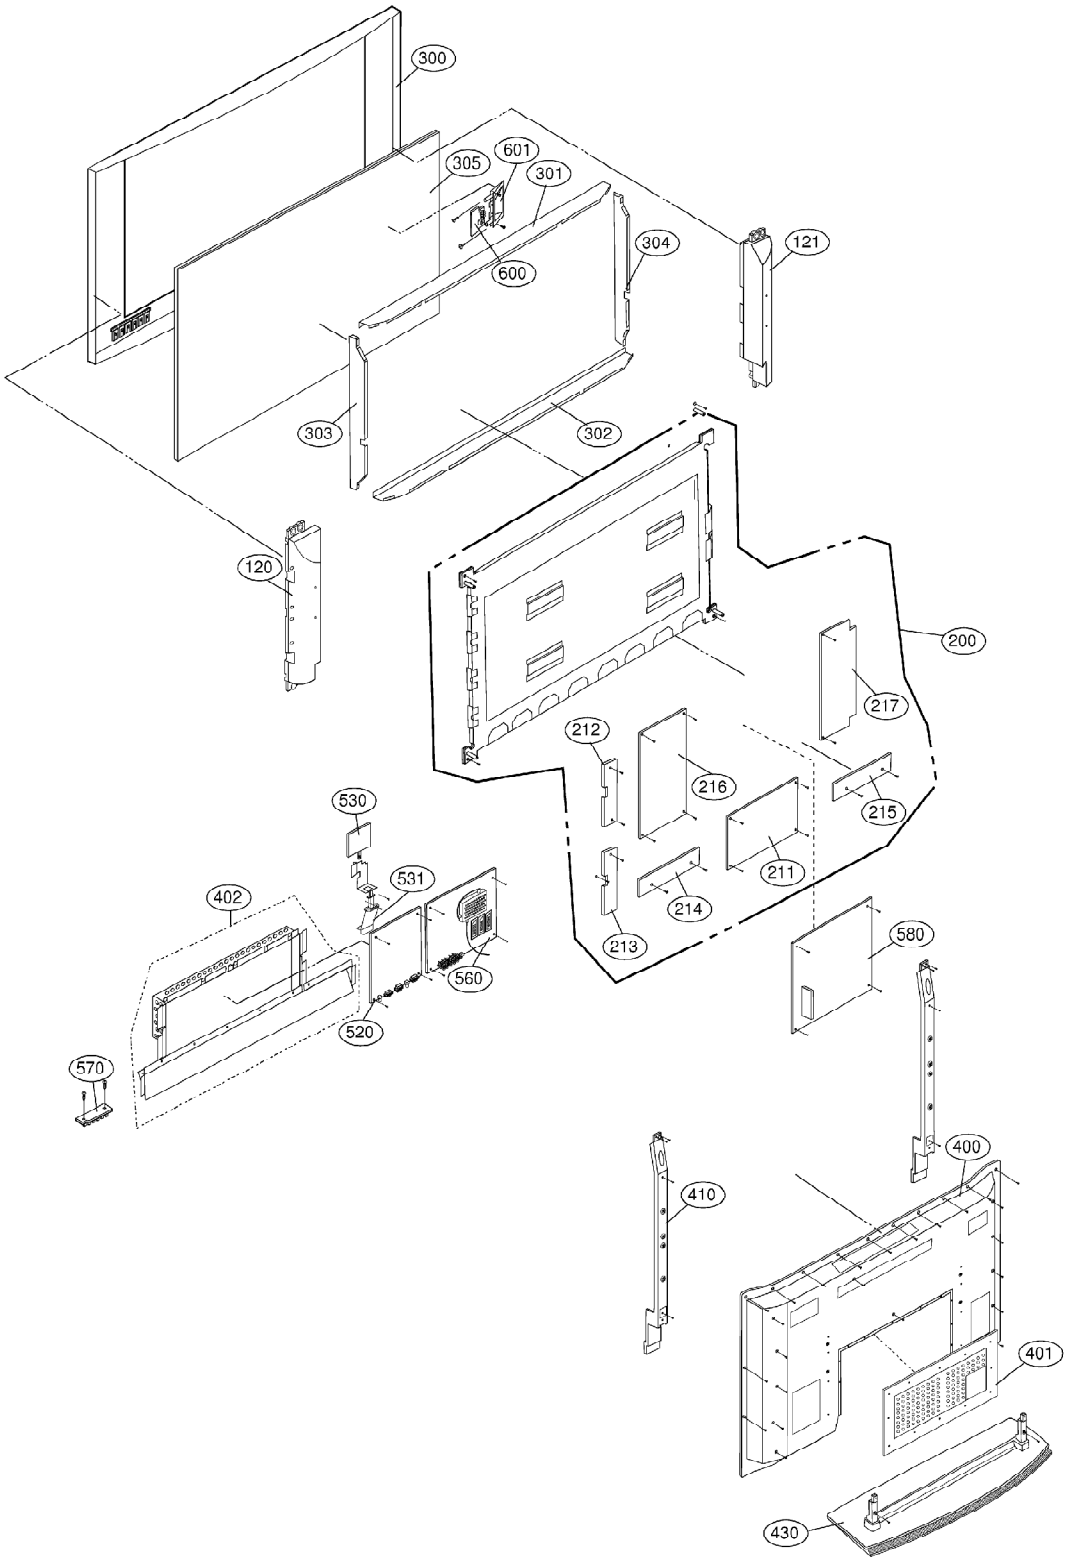

EXPLODED VIEW PARTS LIST

No.	Part No.	Description
120	6401VD0013H	SPEAKER ASSEMBLY, FULL RANGE(L) RZ-42PX10
121	6401VD0013G	SPEAKER ASSEMBLY, FULL RANGE(R) RZ-42PX10
200	6348Q-E064F	PDP, 42" 16:9 852*480 PDP42V60011.ADLGA
211	6871QCH046B	PWB ASSEMBLY,DISPLAY CTRL ASSY HAND INSERT 42V6A ASIC 4023 100PIN FPGA
212	6871QDH066A	PWB ASSEMBLY,DISPLAY YDRV ASSY HAND INSERT 42V6 YDRV TOP HAND INSERT ASSY
213	6871QDH067A	PWB ASSEMBLY,DISPLAY YDRV ASSY HAND INSERT 42V6 YDRV BTM HAND INSERT ASSY
214	6871QLH034A	PWB ASSEMBLY,DISPLAY XRLT ASSY HAND INSERT 42V6_XL(4LAYER)
215	6871QRH037A	PWB ASSEMBLY,DISPLAY XRRT ASSY HAND INSERT 42V6_XR(4LAYER)
216	6871QYH029A	PWB ASSEMBLY,DISPLAY YSUS ASSY HAND INSERT 42V6
217	6871QZH033A	PWB ASSEMBLY,DISPLAY ZSUS ASSY HAND INSERT 42V6
300	3091V00684D	CABINET ASSEMBLY, RZ-42PX10
	3091V00684L	CABINET ASSEMBLY, RT-42PX11
301	4980V01067E	SUPPORTER, ASSY AL FILTER TOP RZ-42PX12X 7T SKD
302	4980V01068E	SUPPORTER, ASSY AL FILTER BOT RZ-42PX12X 7T SKD
303	4980V01069E	SUPPORTER, ASSY AL FILTER RIGHT RZ-42PX12X 7T SKD
304	4980V01070E	SUPPORTER, ASSY AL FILTER LEFT RZ-42PX12X 7T SKD
305	3790V00281G	FILTER(MECH), RZ-42PX10 NBK 1142G03EK-M6 AR/NIR MESH GLASS 3 LAYER
400	3809V00444D	BACK COVER ASSEMBLY, RZ-42PX12X SKD
401	3301V00025F	PLATE ASSEMBLY, ASSY VSC TUNER COVER RZ-42PX10 SKD
402	3301V00023G	PLATE ASSEMBLY, ASSY AV VSC TUNER RZ-42PX10 SKD
410	4980V01071B	SUPPORTER, ASSY AL VERTICAL RZ-42PX10 SKD
430	3501V00171B	BOARD ASSEMBLY, STAND RZ-42PX10 NF036B SKD
520	6871VMMU00A	PWB ASSEMBLY,MAIN RF043B MALIBU RZ V6A MAIN LIP SYNC
530	6871VSME92A	PWB ASSEMBLY,SUB PSW RF043A MAILBU
531	5020V00915B	BUTTON, POWER RZ-42PX10 ABS, AF-303S SKD
560	6871VSMS03C	PWB ASSEMBLY,SUB, TUNER RF043B MALIBU RZ SUB ANALOG MANUAL LIP SYNC
570	6871VSMZ91A	PWB ASSEMBLY,SUB CONT RF043A NEW HOLDER LOCAL KEY KODENSI
580	3501V00180A	BOARD ASSEMBLY, POWER RZ-42PX10 RF043A 1H201W1 SANKEN PSU
600	6871VSME91A	PWB ASSEMBLY,SUB A/V RF043A MALIBU SIDE AV
601	4811V00118C	BRACKET ASSEMBLY, SIDE AV RZ-42PX10 SKD

REPLACEMENT PARTS LIST

LOCA. NO	PART NO	DESCRIPTION
IC		
IC100	0IMI623200B	M62320FP,I/O EXPANDER 16P SOP TP
IC100	0IMMRAL014B	AT24C02N-10SI-2.7 ATMEL 8P SOIC
IC1000	0IMCRFA010A	KA7809R, FAIRCHILD 2P D-PAK
IC1001	0IPRPML001A	MIC39100 MICREL 3P SOT223
IC1002	0IMCRSH001A	PQ05DZ1U SHARP 5, SMD TYPE
IC1003	0ITK118100B	TK11840L 8P SOT23L
IC1004	0IMCRSH001A	PQ05DZ1U SHARP 5, SMD TYPE
IC101	0IMMRAL014B	AT24C02N-10SI-2.7 ATMEL 8P SOIC
IC102	0IMCRTI003A	SN74HCT08D 16P R/TP QUADRUPLE
IC103	0IMCRTI021A	SN74LVTH541PWR 20P TSSOP
IC104	0IMCRTI021A	SN74LVTH541PWR 20P TSSOP
IC1100	0IMCRTH002A	THC63LVD103 64P TQFP
IC1200	0IMCRSJ001A	SC1565IST-1.8 SEMTECH 3P SOT223 TP
IC1201	0IPRPML001A	MIC39100 MICREL 3P SOT223
IC1202	0IMCRFA010A	KA7809R, FAIRCHILD 2P D-PAK, R/TP IC
IC1300	0IMCRRH001A	BA033FP-E2 ROHM 3P-SOP,TO252-3 R/TP 3.3V
IC1301	0IMCRSH001A	PQ05DZ1U SHARP 5, SMD TYPE R/TP
IC1302	0IMCRSH001A	PQ05DZ1U SHARP 5, SMD TYPE R/TP
IC1303	0IMCRRH001A	BA033FP-E2 ROHM 3P-SOP,TO252-3 R/TP 3.3V
IC1304	0IMCRSJ001A	SC1565IST-1.8 SEMTECH 3P SOT223 TP
IC1305	0IMCRRH001A	BA033FP-E2 ROHM 3P-SOP,TO252-3 R/TP 3.3V
IC1306	0IPRPML001A	MIC39100 MICREL 3P SOT223 R/TP LDO TYPE 2.5V
IC200	0IFA742530B	74ACT253SC FAIRCHILD 16P SOIC
IC201	0IMCRSG010A	ST3232CDR SGS-THOMSON SOP16
IC202	0IMCRMI006A	M52758FP MITSUBISHI 36PIN, R/TP PLL IC
IC203	0ISTLSG009A	M74HC123RM13TR 16P SOP
IC400	0ISO206900A	CXA2069Q QFP64 BK I2C BUS AV S/W
IC401	0ISO210100B	CXA2101AQ 80P,QFP BK
IC402	0IMCRTI003A	SN74HCT08D 16P R/TP QUADRUPLE
IC500	0ICTMLG018A	LGDP4410 LG IC 176P TQFP
IC500	0IMCRMN023A	SDA6001 QH B12 MICRONAS 128P MQFP
IC501	0IMMRHY001F	HY57V641620HGT-H HYNIX 54P TSOPII
IC502	0IMMRMR006B	MX29LV160ATTC-70 MACRONIX 48P TSOP
IC503	0IMCRAL006A	AT24C16AN-10SI-2.7 ATMEL 8P SOIC
IC504	0IKE702700D	KIA7027AF 3, SOT-89 TP RESET IC 2.7V
IC600	0IIT323000E	VPC3230D C5 80P QFP
IC600	0IMCRGN002C	FLI2300BD GENESIS 208P PQFP
IC601	0IMMRHY033A	HY57V643220C(L)T-6 HYNIX 86P TSOP
IC700	0IIT323000E	VPC3230D C5 80P QFP
IC700	0IPRPGN012A	GM1501HBD GENESIS 416P PBGA
IC701	0IMMRAL025A	AT24C32AN-10SI-2.7 ATMEL 8PIN SOP TP 32K 3.3V
IC702	0IKE704200J	KIA7042AF SOT 89 TP 4.2V VOLTAGE
IC800	0IMCRMN028A	MSP4410G-QA-C13-101
IC800	0IMMRHY020B	HY5DU283222AQ-5 HYNIX 100P LQFP
IC801	0IMCRNL001A	NSP-6241B NEOFIDELITY 64P TQFP
IC801	0IMMRMR023B	MX29LV800BTTC-70 MACRONIX 48P TSOP
IC802	0IMCRTI028C	TAS5122DCAR 56P/TSSOP R/TP 30W
IC803	0IPRPJR017A	NJU26901E2 JRC 8P,EMP
IC805	0IKE704200J	KIA7042AF SOT-89 TP 4.2V

LOCA. NO	PART NO	DESCRIPTION
TRANSISTOR		
Q001	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q002	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q100	0TR150400BA	CHIP 2SA1504S(ASY) KEC
Q100	0TR830009BA	BSS83 TP PHILIPSN-CHANNEL S/W TR
Q1000	0TRKE80038A	KTC3552T-RTK KEC R/TP SOT-23F 50V 3A
Q101	0TR830009BA	BSS83 TP PHILIPSN-CHANNEL S/W TR
Q102	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q102	0TR830009BA	BSS83 TP PHILIPSN-CHANNEL S/W TR
Q103	0TR150400BA	CHIP 2SA1504S(ASY) KEC
Q103	0TR830009BA	BSS83 TP PHILIPSN-CHANNEL S/W TR
Q105	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q106	0TR150400BA	CHIP 2SA1504S(ASY) KEC
Q107	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q108	0TR150400BA	CHIP 2SA1504S(ASY) KEC
Q109	0TR150400BA	CHIP 2SA1504S(ASY) KEC
Q110	0TR830009BA	BSS83 TP PHILIPSN-CHANNEL S/W TR
Q111	0TR830009BA	BSS83 TP PHILIPSN-CHANNEL S/W TR
Q1200	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q1201	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q1202	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q207	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q208	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q209	0TR150400BA	CHIP 2SA1504S(ASY) KEC
Q210	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q211	0TR104009AF	CHIP KRC104S SOT-23 TP KEC
Q214	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q300	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q301	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q302	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q303	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q304	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q305	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q306	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q307	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q308	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q309	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q310	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q311	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q312	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q313	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q314	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q315	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q316	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q400	0TR150400BA	CHIP 2SA1504S(ASY) KEC
Q400	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q401	0TR150400BA	CHIP 2SA1504S(ASY) KEC
Q401	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q402	0TR150400BA	CHIP 2SA1504S(ASY) KEC
Q402	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q403	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q404	0TR387500AA	CHIP 2SC3875S(ALY) KEC

For Capacitor & Resistors, the charactors at 2nd and 3rd digit in the P/No. means as follows;	CC, CX, CK, CN : Ceramic CQ : Polyestor CF : Electrolytic	RD : Carbon Film RS : Metal Oxide Film RN : Metal Film RF : Fusible

LOCA. NO	PART NO	DESCRIPTION
Q405	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q406	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q800	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q801	0TR387500AA	CHIP 2SC3875S(ALY) KEC
Q802	0TR387500AA	CHIP 2SC3875S(ALY) KEC
DIODE		
D100	0DD226239AA	CHIP KDS226 SOT-23
D100	0DD226239AA	CHIP KDS226 SOT-23
D1000	0DD226239AA	CHIP KDS226 SOT-23
D1001	0DD184009AA	KDS184S CHIP 85V 300MA KEC TP
D1002	0DD226239AA	CHIP KDS226 SOT-23
D1003	0DD226239AA	CHIP KDS226 SOT-23
D1004	0DD226239AA	CHIP KDS226 SOT-23
D101	0DD226239AA	CHIP KDS226 SOT-23
D101	0DD226239AA	CHIP KDS226 SOT-23
D102	0DD226239AA	CHIP KDS226 SOT-23
D105	0DD184009AA	KDS184S CHIP 85V 300MA KEC TP
D116	0DD226239AA	CHIP KDS226 SOT-23
D117	0DD226239AA	CHIP KDS226 SOT-23
D118	0DD226239AA	CHIP KDS226 SOT-23
D119	0DD226239AA	CHIP KDS226 SOT-23
D120	0DD226239AA	CHIP KDS226 SOT-23
D1200	0DD226239AA	CHIP KDS226 SOT-23
D1201	0DD226239AA	CHIP KDS226 SOT-23
D1206	0DD226239AA	CHIP KDS226 SOT-23
D121	0DD226239AA	CHIP KDS226 SOT-23
D122	0DD226239AA	CHIP KDS226 SOT-23
D123	0DD226239AA	CHIP KDS226 SOT-23
D124	0DD226239AA	CHIP KDS226 SOT-23
D125	0DD226239AA	CHIP KDS226 SOT-23
D126	0DD226239AA	CHIP KDS226 SOT-23
D127	0DD226239AA	CHIP KDS226 SOT-23
D128	0DD226239AA	CHIP KDS226 SOT-23
D129	0DD226239AA	CHIP KDS226 SOT-23
D130	0DD226239AA	CHIP KDS226 SOT-23
D1300	0DD226239AA	CHIP KDS226 SOT-23
D1301	0DD226239AA	CHIP KDS226 SOT-23
D1302	0DD226239AA	CHIP KDS226 SOT-23
D1303	0DD226239AA	CHIP KDS226 SOT-23
D1304	0DD226239AA	CHIP KDS226 SOT-23
D1305	0DD226239AA	CHIP KDS226 SOT-23
D1306	0DD226239AA	CHIP KDS226 SOT-23
D131	0DD226239AA	CHIP KDS226 SOT-23
D200	0DD226239AA	CHIP KDS226 SOT-23
D201	0DD226239AA	CHIP KDS226 SOT-23
D202	0DD226239AA	CHIP KDS226 SOT-23
D203	0DD226239AA	CHIP KDS226 SOT-23
D204	0DD226239AA	CHIP KDS226 SOT-23
D205	0DD226239AA	CHIP KDS226 SOT-23
D500	0DD226239AA	CHIP KDS226 SOT-23
D501	0DD226239AA	CHIP KDS226 SOT-23

LOCA. NO	PART NO	DESCRIPTION
D502	0DD226239AA	CHIP KDS226 SOT-23
D503	0DD226239AA	CHIP KDS226 SOT-23
ZD100	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD101	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD102	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD103	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD104	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD105	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD206	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD207	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD208	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD400	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD401	0DR050008AA	SD05.TC R/TP SEMTECH SOD323 5V 5A 15A
ZD800	0DZ820009AH	MTZJ8.2B TP ROHM-K DO34 - 8.2V 5UA -
CAPACITOR		
C002	0CE4763F618	47UF SRE 16V M FL TP5
C1001	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1002	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1004	0CE475SK6DC	4.7UF MVG 50V 20% SMD R/TP
C1006	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1016	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1017	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1018	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C102	0CE475SK6DC	4.7UF MVG 50V 20% SMD R/TP
C1020	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1022	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1025	0CE475SK6DC	4.7UF MVG 50V 20% SMD R/TP
C1027	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1031	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1037	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C104	0CE476DF618	47UF STD 16V M FL TP5
C1042	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1045	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C105	0CE476DF618	47UF STD 16V M FL TP5
C1058	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1059	0CE477DJ618	470UF STD 35V 20% FL TP 5
C1060	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1063	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1066	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1067	0CE477DJ618	470UF STD 35V 20% FL TP 5
C107	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1072	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1074	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1078	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1079	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C108	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1081	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C111	0CE475SK6DC	4.7UF MVG 50V 20% SMD R/TP
C112	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C113	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C114	0CE475SK6DC	4.7UF MVG 50V 20% SMD R/TP

For Capacitor & Resistors, the charactors at 2nd and 3rd digit in the P/No. means as follows;	CC, CX, CK, CN : Ceramic CQ : Polycstor CF : Electrolytic	RD : Carbon Film RS : Metal Oxide Film RN : Metal Film RF : Fusible

LOCA. NO	PART NO	DESCRIPTION
C120	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C1202	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C1205	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1206	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C121	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C121	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1211	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1212	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1215	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1216	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1218	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1220	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1229	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1233	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C124	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1249	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1250	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1251	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1254	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1256	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1257	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1259	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C127	0CE475SK6DC	4.7UF MVG 50V 20% SMD R/TP
C1273	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C1274	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1275	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1279	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1305	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1314	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C1315	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1317	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1331	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1333	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1353	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1355	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1362	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1366	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1368	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C1373	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C1374	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C1384	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C1388	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C1391	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1400	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C1402	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C1404	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1410	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1415	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C1425	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C208	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C220	0CE477SF6DC	470UF MVG 16V 20% R/TP(SMD) SMD
C222	0CE476XFKDC	47UF MVK-BP,CN 16V 20%,-20% SMD TAPPING

LOCA. NO	PART NO	DESCRIPTION
C223	0CE476XFKDC	47UF MVK-BP,CN 16V 20%,-20% SMD TAPPING
C224	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C224	0CE476XFKDC	47UF MVK-BP,CN 16V 20%,-20% SMD TAPPING
C225	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C226	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C227	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C230	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C251	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C254	0CN105EJ56A	1.0UF 3216 35V 10% R/TP X7R
C258	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C261	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C263	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C272	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C274	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C301	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C302	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C304	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C316	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C317	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C318	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C323	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C325	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C327	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C400	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C401	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C402	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C404	0CE227VF6DC	220UF MV 16V 20% R/TP(SMD) SMD
C406	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C410	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C423	0CE105SK6DC	1UF MVG 50V M SMD R/TP
C429	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C435	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C440	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C442	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C502	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C505	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C506	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C507	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C508	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C509	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C517	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C520	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C522	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C523	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C525	0CE105SK6DC	1UF MVG 50V M SMD R/TP
C527	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C529	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C534	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C604	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C612	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C615	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C627	0CE107SF6DC	100UF MVG 16V M SMD R/TP

For Capacitor & Resistors, the charactors at 2nd and 3rd digit in the P/No. means as follows;	CC, CX, CK, CN : Ceramic CQ : Polycstor CF : Electrolytic	RD : Carbon Film RS : Metal Oxide Film RN : Metal Film RF : Fusible

LOCA. NO	PART NO	DESCRIPTION
C629	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C632	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C702	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C703	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C709	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C712	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C720	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C723	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C726	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C737	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C744	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C752	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C757	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C762	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C769	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C777	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C778	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C785	0CE335SK6DC	3.3UF MVG 50V 20% SMD R/TP
C800	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C801	0CE226SF6DC	22UF MVG 16V 20% SMD R/TP
C802	0CE476SF6DC	47UF MVG 16V M SMD R/TP
C803	0CE226VF6DC	22UF MV 16V 20% R/TP(SMD) SMD
C812	0CE226VF6DC	22UF MV 16V 20% R/TP(SMD) SMD
C822	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C825	0CE335SK6DC	3.3UF MVG 50V 20% SMD R/TP
C827	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C828	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C829	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C834	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C837	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C840	0CE106SF6DC	10UF MVG 16V 20% R/TP(SMD) SMD
C841	0CE107SF6DC	100UF MVG 16V M SMD R/TP
C847	0CN105EJ56A	1.0UF 3216 35V 10% R/TP X7R
C851	0CE108DH618	1000UF STD 25V M FL TP5
C852	0CE108DH618	1000UF STD 25V M FL TP5
C862	0CF4741L438	0.47UF D 63V 5% TP 5 M/PE NI
C863	0CF4741L438	0.47UF D 63V 5% TP 5 M/PE NI
C872	0CE335SK6DC	3.3UF MVG 50V 20% SMD R/TP
C873	0CN105EJ56A	1.0UF 3216 35V 10% R/TP X7R
C874	0CE108DH618	1000UF STD 25V M FL TP5
COIL		
L1004	6140VB0004B	26UH 1UEWPHY 22.5TURN YL 9N 0.4
L1005	6140VB0004B	26UH 1UEWPHY 22.5TURN YL-9N 0.4
L1006	6140VB0004B	26UH 1UEWPHY 22.5TURN YL-9N 0.4
L1007	6140VB0004B	26UH 1UEWPHY 22.5TURN YL-9N 0.4
L1200	6140VB0004B	26UH 1UEWPHY 22.5TURN YL-9N 0.4
L1203	6140VB0004B	26UH 1UEWPHY 22.5TURN YL-9N 0.4
L1209	6140VB0004B	26UH 1UEWPHY 22.5TURN YL-9N 0.4
L1213	6140VB0004B	26UH 1UEWPHY 22.5TURN YL-9N 0.4
L803	6140VB0024A	LPK-1322A SOOJUNG 22UH +-10%
L804	6140VB0024A	LPK-1322A SOOJUNG 22UH +-10%

LOCA. NO	PART NO	DESCRIPTION
L805	6140VB0024A	LPK-1322A SOOJUNG 22UH +-10%
L806	6140VB0024A	LPK-1322A SOOJUNG 22UH +-10%
RESISTOR		
AR500	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR503	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR507	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR508	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR509	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR512	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR513	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR600	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR600	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR601	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR601	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR602	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR602	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR603	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR603	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR604	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR605	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR606	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR607	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR608	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR609	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR610	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR611	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR612	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR613	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR614	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR615	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR616	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR617	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR618	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR701	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR702	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR703	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR707	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR708	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR709	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR710	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR711	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR712	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR713	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR714	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR715	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR717	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR718	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
AR719	0RRZVTA001D	22 OHM 1 / 16 W 1608 5% R/TP 4P
R801	0RKZVTA001L	1.0M OHM 1/2 W 5% TA52 UL PILKOR
R802	0RKZVTA001L	1.0M OHM 1/2 W 5% TA52 UL PILKOR

LOCA. NO	PART NO	DESCRIPTION
LED		
LD001	0DL200000CA	SAM5670(DL-2LRG) BK Y-GREEN -
LD1000	0DL233309AC	SAM2333 GREEN/RED GREEN:10MCD, RED:6MCD
LD1001	0DL233309AC	SAM2333 GREEN/RED GREEN:10MCD, RED:6MCD
LD1002	0DL233309AC	SAM2333 GREEN/RED GREEN:10MCD, RED:6MCD
LD1003	0DL233309AC	SAM2333 GREEN/RED GREEN:10MCD, RED:6MCD
LD1203	0DL233309AC	SAM2333 GREEN/RED GREEN:10MCD, RED:6MCD
LD1204	0DL233309AC	SAM2333 GREEN/RED GREEN:10MCD, RED:6MCD
LD1206	0DL233309AC	SAM2333 GREEN/RED GREEN:10MCD, RED:6MCD
LD1207	0DL233309AC	SAM2333 GREEN/RED GREEN:10MCD, RED:6MCD
SWITCH		
SW001	140-315A	TACT SKHV17910B LG C&D12V
SW002	140-315A	TACT SKHV17910B LG C&D12V
SW003	140-315A	TACT SKHV17910B LG C&D12V
SW004	140-315A	TACT SKHV17910B LG C&D12V
SW005	140-315A	TACT SKHV17910B LG C&D12V
SW006	140-315A	TACT SKHV17910B LG C&D12V
SW700	140-313B	TACT 2LEAD 160G(TA) LG C&D NON
SW800	6600VM2006A	SDDF3PATP011 250V 4A HORIZONTAL .G
FILTER & CRYSTAL		
L100	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L100	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1000	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1002	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1008	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1009	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L101	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L101	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1010	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1011	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1012	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1013	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1014	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1015	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1016	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1017	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1018	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1019	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L102	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L102	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L103	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L103	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L104	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L105	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L105	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L106	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L107	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L108	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L1206	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP

LOCA. NO	PART NO	DESCRIPTION
L1207	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1210	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1211	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1216	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1217	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1300	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1302	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1307	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1310	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1311	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1312	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1313	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1314	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1315	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1316	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1317	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1318	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1321	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1322	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1325	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1326	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1327	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1328	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1329	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1330	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1331	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1332	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L1333	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L200	6200JB8013L	BEAD FEELUX R/TP 60 OHM TB201209U060
L200	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L201	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L202	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L203	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L204	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L205	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L206	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L208	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L210	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L211	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L212	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L213	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L213	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L214	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L215	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L216	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L216	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L300	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L301	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L302	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L305	6210VC0005A	BK2125 HS 750 2X1.25X0.85MM R/TP
L306	6210VC0005A	BK2125 HS 750 2X1.25X0.85MM R/TP
L307	6210VC0005A	BK2125 HS 750 2X1.25X0.85MM R/TP

LOCA. NO	PART NO	DESCRIPTION
L308	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L309	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L310	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L311	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L312	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L313	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L314	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L400	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L400	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L401	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L401	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L402	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L403	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L404	6210VC0005A	BK2125 HS 750 2X1.25X0.85MM R/TP
L405	6210VC0005A	BK2125 HS 750 2X1.25X0.85MM R/TP
L406	6210VC0005A	BK2125 HS 750 2X1.25X0.85MM R/TP
L407	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L500	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L501	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L502	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L503	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L504	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L505	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L506	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L507	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L700	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L800	6210VC0006A	FBMH3216 HM501NT 3.2X1.6X1.6MM R/TP
L807	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
L808	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
R102	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
R103	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
R106	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
R107	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
R108	6200JB8010L	MLB-201209-1000L-N2 R/TP 1000OHM 350MA
X500	6202VDT002K	RESONATOR,CRYSTAL SX-1 6MHZ +/- 30 PPM
X600	6202VDB007B	RESONATOR,CRYSTAL HC49U 20.250MHZ
X600	6202VDT002J	RESONATOR,CRYSTAL SX-1 13.500000MHZ
X700	6202VDB007B	RESONATOR,CRYSTAL HC49U 20.250MHZ
X700	6202VDT002B	RESONATOR,CRYSTAL SX-1 SC14.3MHZ
X800	156-A02M	RESONATOR,CRYSTAL HC49U 18.432MHZ
JACK		
JK103	6613V00026A	UJB-03-28A UGCOM
JK200	6612M00009A	UJB-R1-033 UGCOM 21P
JK201	6612M00009A	UJB-R1-033 UGCOM 21P
JK202	6612M00009A	UJB-R1-033 UGCOM 21P
JK300	6612J00057A	UJB-08-01A UGCOM 8P RCA+1P
P101	380-068E	UEJ-CV-018 D3.5 E/P JACK W/SHIELD
P102	6612BRBHN6A	440062-1 AMP DVI INTERACED
P201	380-068E	UEJ-CV-018 D3.5 E/P JACK W/SHIELD

LOCA. NO	PART NO	DESCRIPTION
ACCESSORIES		
A1	3828VA0468P	MANUAL,OWNERS 126R TX 026H
A1	3828VA0468Q	MANUAL,OWNERS 126R TX 026H
A1	3828VA0468R	MANUAL,OWNERS LG EN/GE/CZ/SK/HU/PL/RU 126R
A2	6710V00126R	REMOTE CONTROLLER, RF043A PIP RZ 42PY20 40
A3	6410VBH003C	POWER CORD, MP5004(13A)+V1625 BSI 2800MM
A3	6410VEH003C	POWER CORD, M2511A-001 VDE/SEMKO 2800MM
A4	6851V00022C	CABLE,COAXIAL UL1365#26 VW-1
A5	4810V00509A	BRACKET, WALL AP-40/42DA10NON
A6	6850J00003A	CABLE,DVI UL20276 AWG28 3000MM
A7	6850J00004A	CABLE,DVI LVDS UL20276 AWG30 500MM
A8	6850VA0004J	CABLE,COAXIAL UL1365#26 150MM UCA-EX-069
A9	6866VA9001B	CONNECTOR (CIRC),D-SUB 2990-9C UL 1161 AWG 26
MISCELLANEOUS		
F801	0FS1002B53K	FUSE,SLOW BLOW 10000MA 250 V 5.2X20
P100	6630VGA001C	CONNECTOR (CIRC),D-SUB 68114-1521
P200	6630VGA004B	CONNECTOR (CIRC),D-SUB 69107-0921
PA001	6712000002B	REMOTE CONTROLLER RECEIVER,KSM-603SM12E-1
TU100	6700MF0010A	TUNER, TAUM-W501P MINI 4 SYSTEM MAIN
TU101	6700MF0010B	TUNER, TAFM-W502P MINI 4SYSTEM SUB

#3 S2300

IC600
S2300
BD VERSION
Address : D0

#4 CXA2101AQ

IC401
CXA2101AQ

for text

#5 SCALER(gm1601)

IC700
gm1601_left

IC700
gm1601_bottom

IC700
gm1601_right

Same path length
between gm1601 and DDR

IC701
24LC02

IC704
24LC04

IC705
24LC04

IC706
24LC04

IC707
24LC04

IC708
24LC04

IC709
24LC04

IC710
24LC04

IC711
24LC04

IC712
24LC04

IC713
24LC04

IC714
24LC04

IC715
24LC04

IC716
24LC04

IC717
24LC04

IC718
24LC04

IC719
24LC04

IC720
24LC04

IC721
24LC04

IC722
24LC04

IC723
24LC04

IC724
24LC04

IC725
24LC04

IC726
24LC04

IC727
24LC04

IC728
24LC04

IC729
24LC04

IC730
24LC04

IC731
24LC04

IC732
24LC04

IC733
24LC04

IC734
24LC04

IC735
24LC04

IC736
24LC04

IC737
24LC04

IC738
24LC04

IC739
24LC04

IC740
24LC04

IC741
24LC04

IC742
24LC04

IC743
24LC04

IC744
24LC04

IC745
24LC04

IC746
24LC04

IC747
24LC04

IC748
24LC04

IC749
24LC04

IC750
24LC04

IC751
24LC04

IC752
24LC04

IC753
24LC04

IC754
24LC04

IC755
24LC04

IC756
24LC04

IC757
24LC04

IC758
24LC04

IC759
24LC04

IC760
24LC04

IC761
24LC04

IC762
24LC04

IC763
24LC04

IC764
24LC04

IC765
24LC04

IC766
24LC04

IC767
24LC04

IC768
24LC04

IC769
24LC04

IC770
24LC04

IC771
24LC04

IC772
24LC04

IC773
24LC04

IC774
24LC04

IC775
24LC04

IC776
24LC04

IC777
24LC04

IC778
24LC04

IC779
24LC04

IC780
24LC04

IC781
24LC04

IC782
24LC04

IC783
24LC04

IC784
24LC04

IC785
24LC04

IC786
24LC04

IC787
24LC04

IC788
24LC04

IC789
24LC04

IC790
24LC04

IC791
24LC04

IC792
24LC04

IC793
24LC04

IC794
24LC04

IC795
24LC04

IC796
24LC04

IC797
24LC04

IC798
24LC04

IC799
24LC04

IC800
24LC04

IC801
24LC04

IC802
24LC04

IC803
24LC04

IC804
24LC04

IC805
24LC04

IC806
24LC04

IC807
24LC04

IC808
24LC04

IC809
24LC04

IC810
24LC04

IC811
24LC04

IC812
24LC04

IC813
24LC04

IC814
24LC04

IC815
24LC04

IC816
24LC04

IC817
24LC04

IC818
24LC04

IC819
24LC04

IC820
24LC04

IC821
24LC04

IC822
24LC04

IC823
24LC04

IC824
24LC04

IC825
24LC04

IC826
24LC04

IC827
24LC04

IC828
24LC04

IC829
24LC04

IC830
24LC04

IC831
24LC04

IC832
24LC04

IC833
24LC04

IC834
24LC04

IC835
24LC04

IC836
24LC04

IC837
24LC04

IC838
24LC04

IC839
24LC04

IC840
24LC04

IC841
24LC04

IC842
24LC04

IC843
24LC04

IC844
24LC04

IC845
24LC04

IC846
24LC04

IC847
24LC04

IC848
24LC04

IC849
24LC04

IC850
24LC04

IC851
24LC04

IC852
24LC04

IC853
24LC04

IC854
24LC04

IC855
24LC04

IC856
24LC04

IC857
24LC04

IC858
24LC04

IC859
24LC04

IC860
24LC04

IC861
24LC04

IC862
24LC04

IC863
24LC04

IC864
24LC04

IC865
24LC04

IC866
24LC04

IC867
24LC04

IC868
24LC04

IC869
24LC04

IC870
24LC04

IC871
24LC04

IC872
24LC04

IC873
24LC04

IC874
24LC04

IC875
24LC04

IC876
24LC04

IC877
24LC04

IC878
24LC04

IC879
24LC04

IC880
24LC04

IC881
24LC04

IC882
24LC04

IC883
24LC04

IC884
24LC04

IC885
24LC04

IC886
24LC04

IC887
24LC04

IC888
24LC04

IC889
24LC04

IC890
24LC04

IC891
24LC04

IC892
24LC04

IC893
24LC04

IC894
24LC04

IC895
24LC04

IC896
24LC04

IC897
24LC04

IC898
24LC04

IC899
24LC04

IC900
24LC04

IC901
24LC04

IC902
24LC04

IC903
24LC04

IC904
24LC04

IC905
24LC04

IC906
24LC04

IC907
24LC04

IC908
24LC04

IC909
24LC04

IC910
24LC04

IC911
24LC04

IC912
24LC04

IC913
24LC04

IC914
24LC04

IC915
24LC04

IC916
24LC04

IC917
24LC04

IC918
24LC04

IC919
24LC04

IC920
24LC04

IC921
24LC04

IC922
24LC04

IC923
24LC04

IC924
24LC04

IC925
24LC04

IC926
24LC04

IC927
24LC04

IC928
24LC04

IC929
24LC04

IC930
24LC04

IC931
24LC04

IC932
24LC04

IC933
24LC04

IC934
24LC04

IC935
24LC04

IC936
24LC04

IC937
24LC04

IC938
24LC04

IC939
24LC04

IC940
24LC04

IC941
24LC04

IC942
24LC04

IC943
24LC04

IC944
24LC04

IC945
24LC04

IC946
24LC04

IC947
24LC04

IC948
24LC04

IC949
24LC04

IC950
24LC04

IC951
24LC04

IC952
24LC04

IC953
24LC04

IC954
24LC04

IC955
24LC04

IC956
24LC04

IC957
24LC04

IC958
24LC04

IC959
24LC04

IC960
24LC04

IC961
24LC04

IC962
24LC04

IC963
24LC04

IC964
24LC04

IC965
24LC04

IC966
24LC04

IC967
24LC04

IC968
24LC04

IC969
24LC04

IC970
24LC04

IC971
24LC04

IC972
24LC04

IC973
24LC04

IC974
24LC04

IC975
24LC04

IC976
24LC04

IC977
24LC04

IC978
24LC04

IC979
24LC04

IC980
24LC04

IC981
24LC04

IC982
24LC04

IC983
24LC04

IC984
24LC04

IC985
24LC04

IC986
24LC04

IC987
24LC04

IC988
24LC04

IC989
24LC04

IC990
24LC04

IC991
24LC04

IC992
24LC04

IC993
24LC04

IC994
24LC04

IC995
24LC04

IC996
24LC04

IC997
24LC04

IC998
24LC04

IC999
24LC04

#6 DDR RAM/F_ROM

IC800
HY5DU283222A
SDRAM 128MB

IC801
AM29LV160(1Mbyte)

IC802
M1 AM64 M128K

ON (1BOW) : 1-3, 4-5
OFF(Normal) : 2-3, 5-6

1M Memory-R810-R814-R815 OPEN & R833-R831 100ohm
512K Memory-R810-R815 100ohm & R827-R828-R832 SHORT

BOOTSTRAP HEADER
OPEN = 1
CLOSED = 0

DCMODE	
10-12	CMOSTUNE TCLK1
11-13	HIGH: Set all display output to '0'
11-13	LOW:
14-16	HIGH:Disable serial interface debug
14-16	LOW
15-17	NC-HIGH:use crystal
15-17	NC-LOW
16-18	HIGH/LOW:16bit bus with DCM access external ROM
16-18	

7 IEP

IC500

IEP

#9 POWER

1.1 LVDS RECEIVER

IC1450

#10 POWER

#8 OUTPUT(TMDS)

P900

TC900

PRINTED CIRCUIT BOARD

MAIN (TOP)

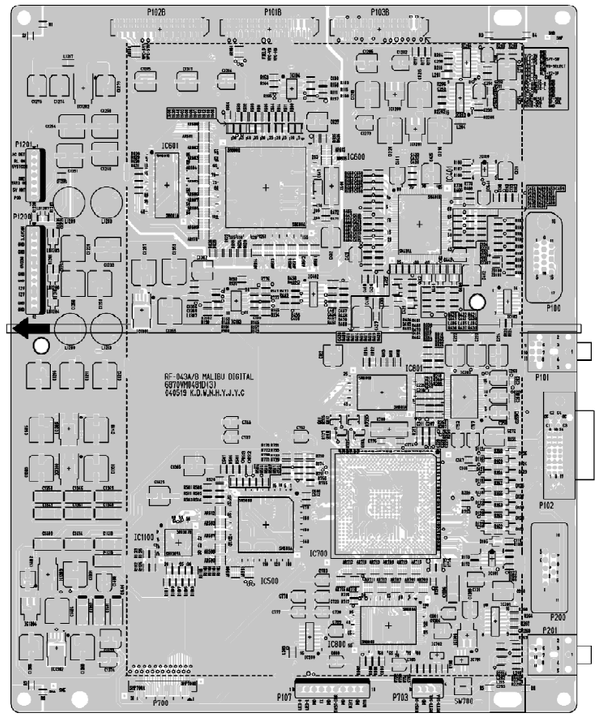

MAIN (BOTTOM)

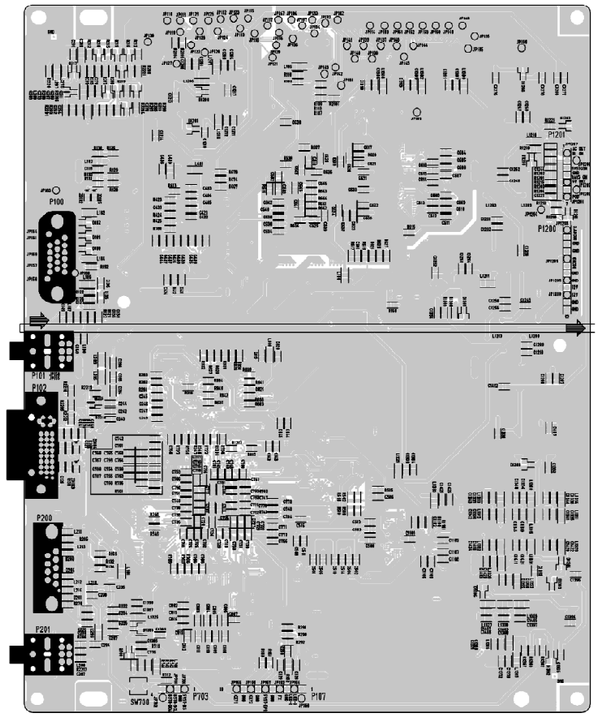

POWER S/W(TOP)

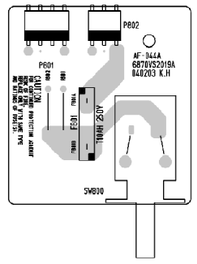

POWER S/W(BOTTOM)

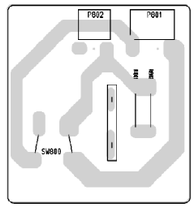

SIDE A/V(TOP)

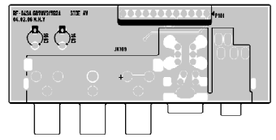

SIDE A/V(BOTTOM)

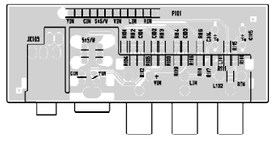

TUNER(TOP)

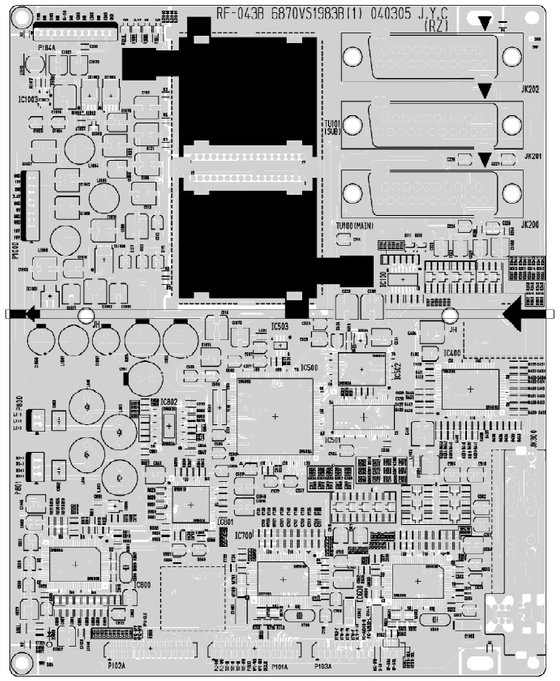

TUNER(BOTTOM)

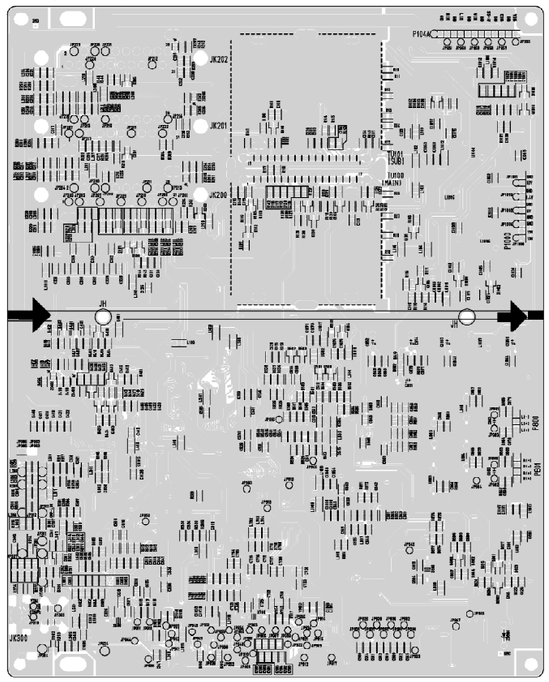

CONTROL(TOP)

CONTROL(BOTTOM)

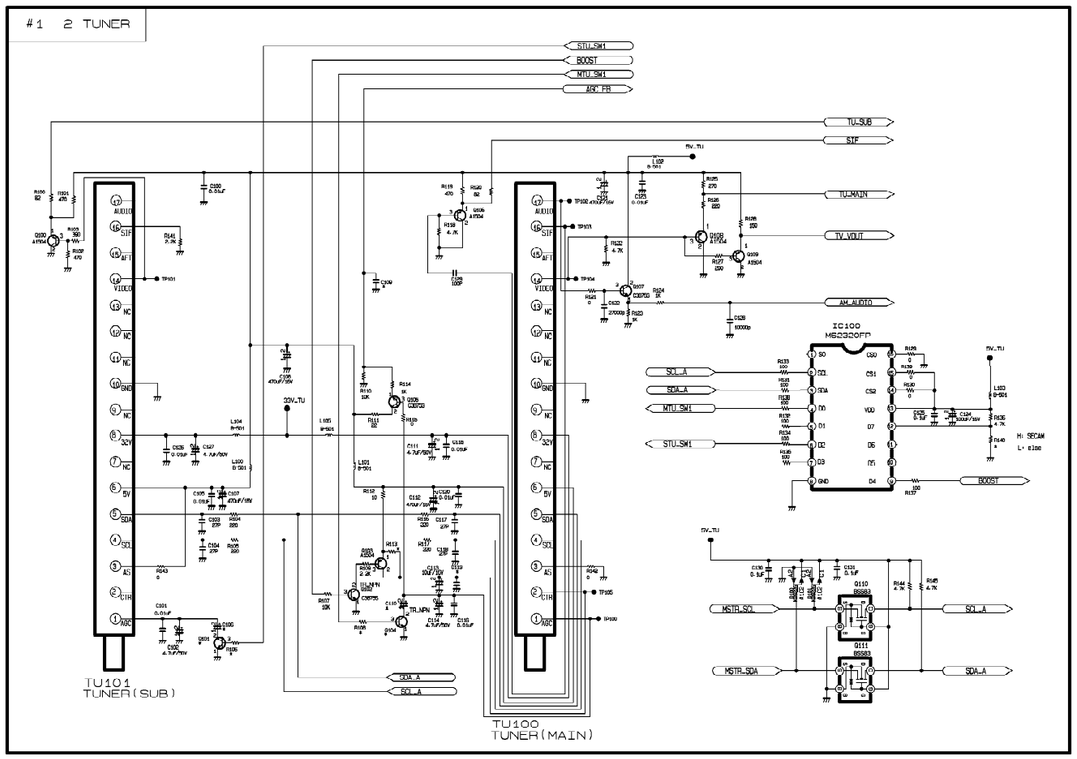
#1 2 TUNER
STU_SW1
BOOST
MTU_SW1
AGC_FIX
TU_SUB
STIF
TU_MAIN
TV_VOUT
AM_AUDIO
IC100
MB2320FP
SCL_A
SDA_A
MTU_SW1
STU_SW1
BOOST
M: SECAM
L: other
TV_TU
20V_TU
MSTR_SCL
MSTR_SDA
TU101
TUNER(SUB)
TU100
TUNER(MAIN)

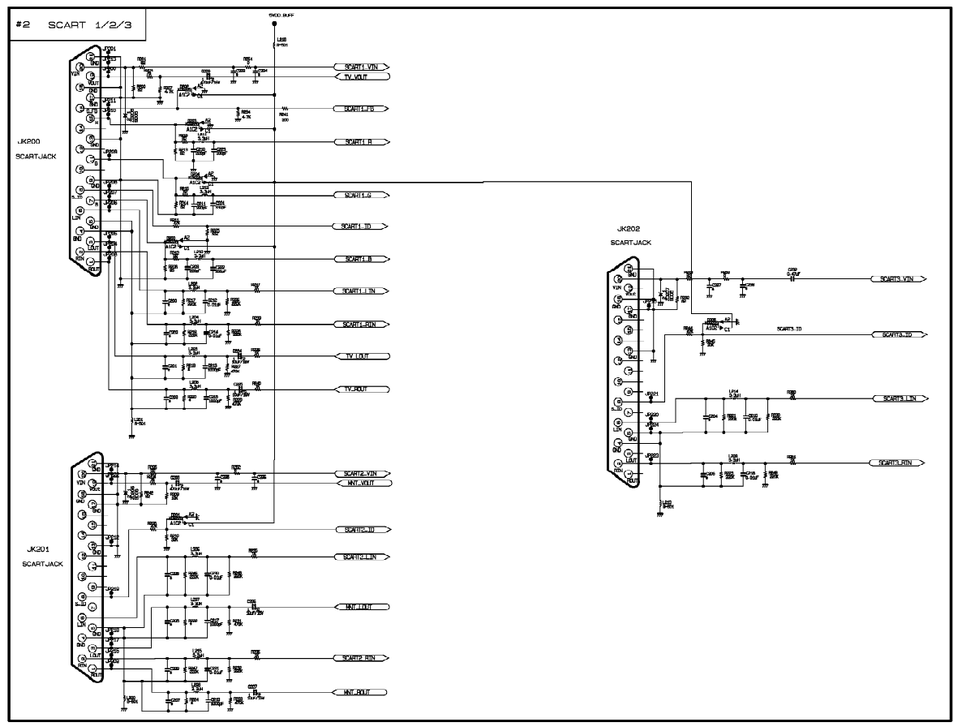
#2 SCART 1/2/3
JK200
SCART JACK
JK201
SCART JACK
JK202
SCART JACK
SCART1 VIN
TV VOUT
SCART1 FB
SCART1 R
SCART1 G
SCART1 ID
SCART1 B
SCART1 LIN
SCART1 RIN
TV I OUT
TV_ROUT
SCART2 VIN
MNT VOUT
SCART2 ID
SCART2 LIN
MNT I OUT
SCART2 RIN
MNT ROUT
SCART3 VIN
SCART3 ID
SCART3 LIN
SCART3 RIN

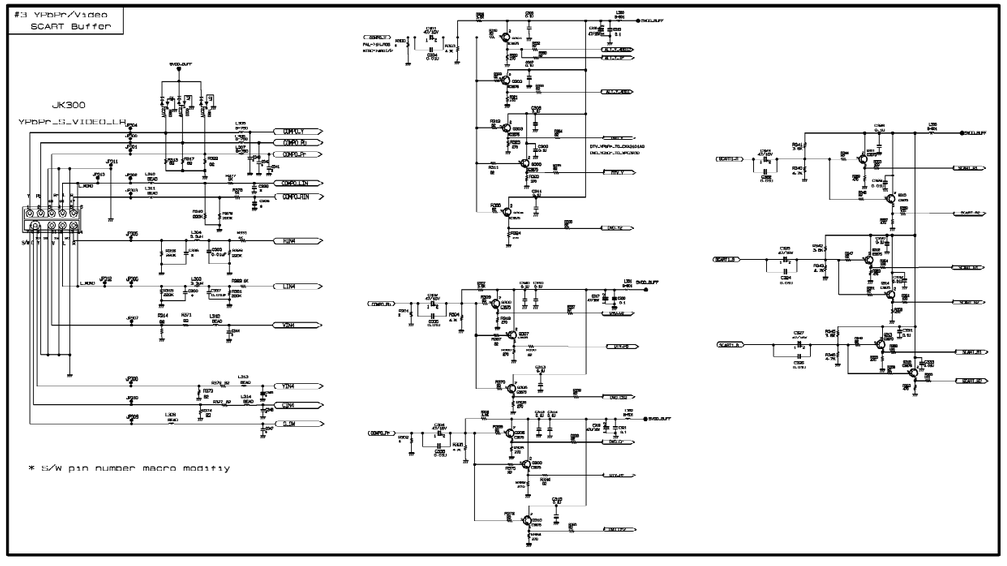
#3 YPBPR/Video
SCART Buffer
JK300
YPBPR_S_VIDEO_LR
* S/W pin number macro modify

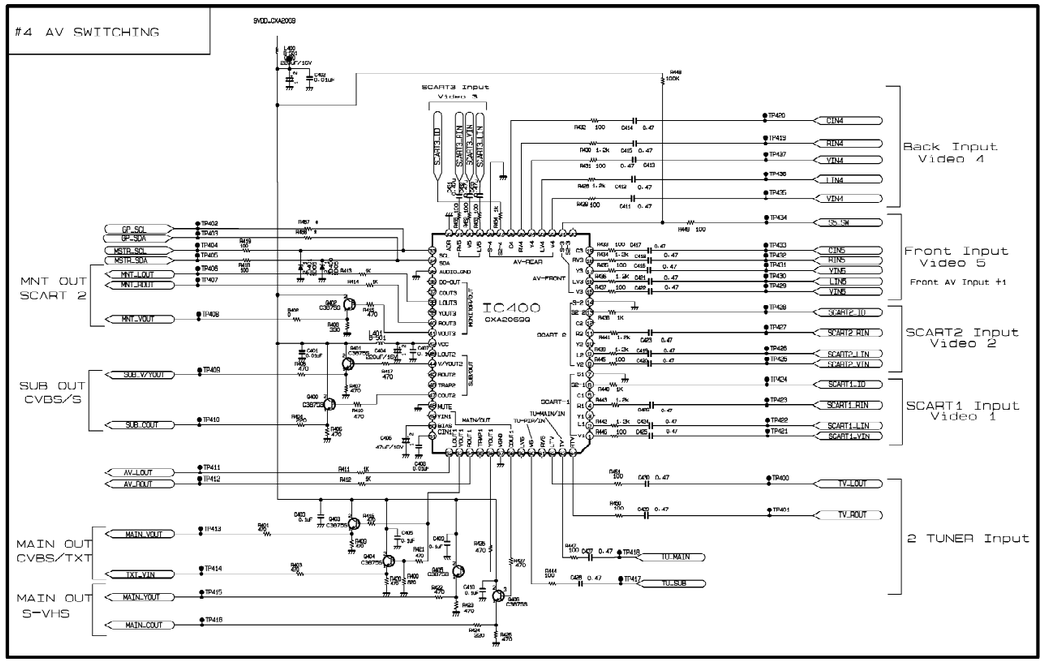
#4 AV SWITCHING
IC400
CXA2056Q
SCART3 Input
Video 3
SCART2 Input
Video 2
SCART1 Input
Video 1
AV-REAR
AV-FRONT
MNT OUT
SCART 2
SUB OUT
CVBS/S
MAIN OUT
CVBS/TXT
MAIN OUT
S-VHS
Back Input
Video 4
Front Input
Video 5
Front AV Input +1
SCART2 Input
Video 2
SCART1 Input
Video 1
2 TUNER Input

#5 u-COM(SDA6001)
TEXT IC

IC500
SDA6001

IC502
FLASH ROM

IC501
SDRAM
HY57V641620HC

#6 VIDEO DECODER(MAIN)

IC600 CS VER.
VPC3230D (MAIN)
[ADDR:8C]

#7 VIDEO DECODER(SUB)

IC700 CS VER.
VPC3230D (SUB)
[ADDR:8C]

#8 Digital Audio

IC800
MSP4410G C13

IC801
NSP8211A

#9 CONNECTOR

P101A
31PIN

P102A
31PIN

P103A
31PIN

P104A
12PIN

P105A
4PIN

#1 INPUT

P100
D-SUB15

Signal Path: 1 Layer

P101
PHONE

IC100
74HC4052

IC101
TC7SS3

P102
SCART

P103B
31PIN

P101B
31PIN

P102B
31PIN

#2 RGB/YPbPr_SWITCH

BOM Option in A2

IC201
DS232A

P200
RS-232C

IC202
MS2758

P204
EAR-JACK

IC203
74LS123

IC204
74LS123A2

IC2000
74AC125SSC

#10 POWER

P300

IC1002
PQ05RD21U

IC1004
PQ05RD21U

IC1001
M62009GP-5.0DG

TK11840L